


# Menora



VIDEO




PDF

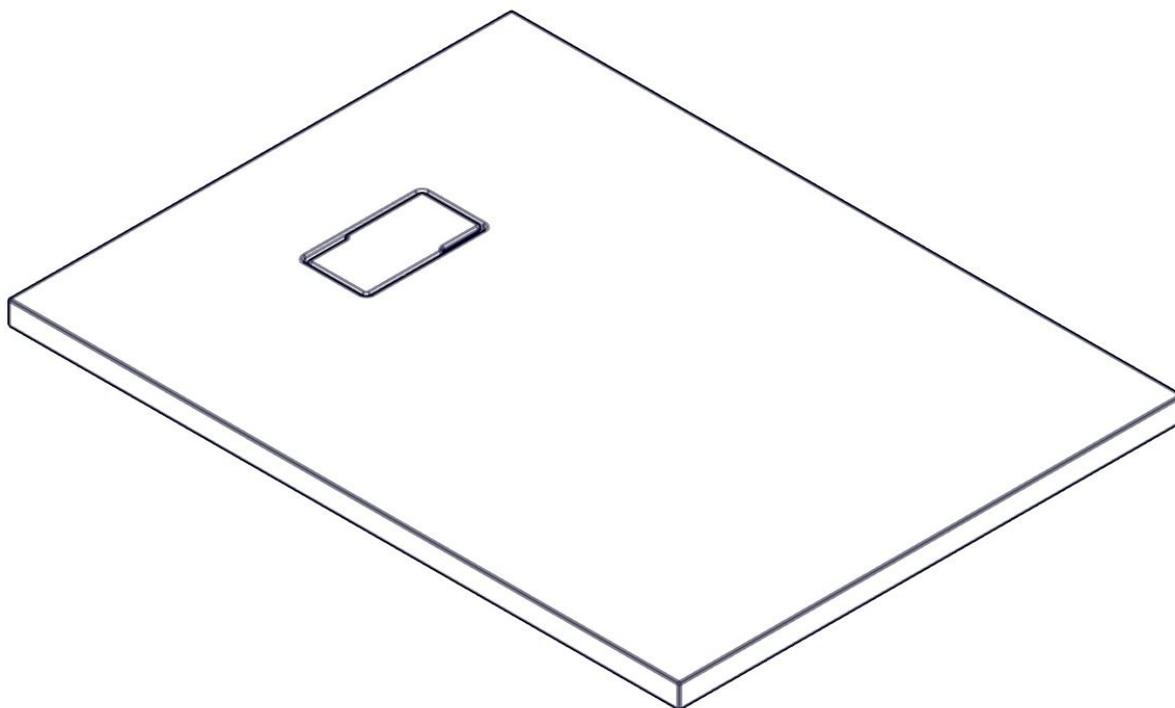


- SI** Tuš kad - navodilo za vgradnjo na tla
- HR** Tuš kada - upute za ugradnju na pod
- SRB** Tuš kada - uputstvo za ugradnju na pod
- MK** Туш када - упатства за инсталација (поставување на под)
- RU** Душевой поддон - инструкция по установке (установке на пол)
- UA** Душовий піддон - інструкція з монтажу на підлогу


- HU** Zuhanytálca - beépítési útmutató (beépítés padlóra)
- RO** Cadă de duș - instrucțiuni de instalare (pe podea)
- GB** Shower tray - installation instructions (raised installation)
- DE** Duschwanne - Einbauanleitung (Bodenaufstellung)
- IT** Piatto doccia - istruzioni per l'installazione (installazione in appoggio)
- FR** Receveur de douche - instructions d'installation (installation posée)

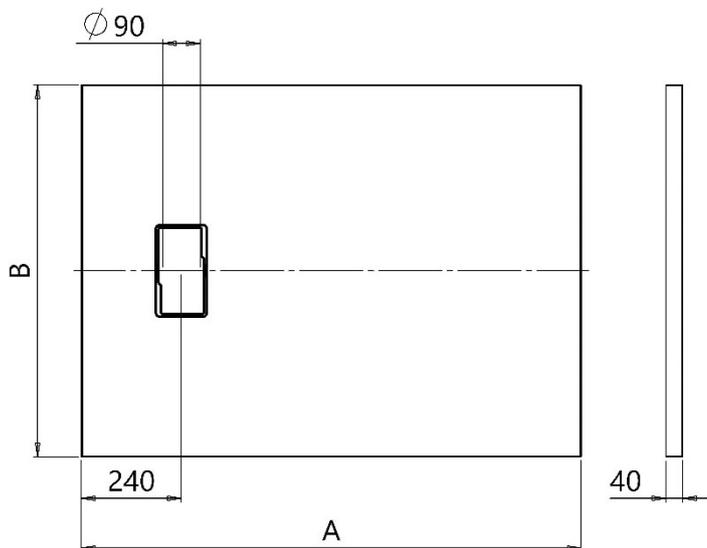

	A	B
MENORA 90X80	900	800
MENORA 100X80	1000	800
MENORA 100X90	1000	900
MENORA 120X80	1200	800
MENORA 120X90	1200	900
MENORA 120X100	1200	1000
MENORA 140X80	1400	800
MENORA 140X90	1400	900
MENORA 140X100	1400	1000
MENORA 160X80	1600	800
MENORA 160X90	1600	900
MENORA 180X80	1800	800
MENORA 180X90	1800	900
MENORA 200X80	2000	800
MENORA 200X90	2000	900

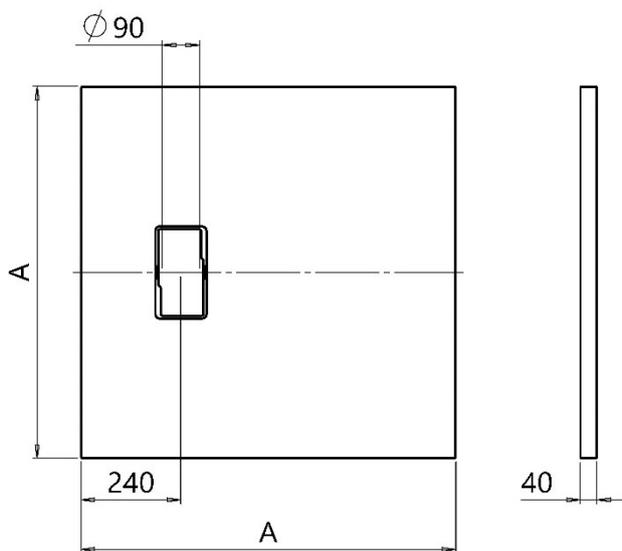


	A
MENORA Q80	800
MENORA Q90	900
MENORA Q100	1000

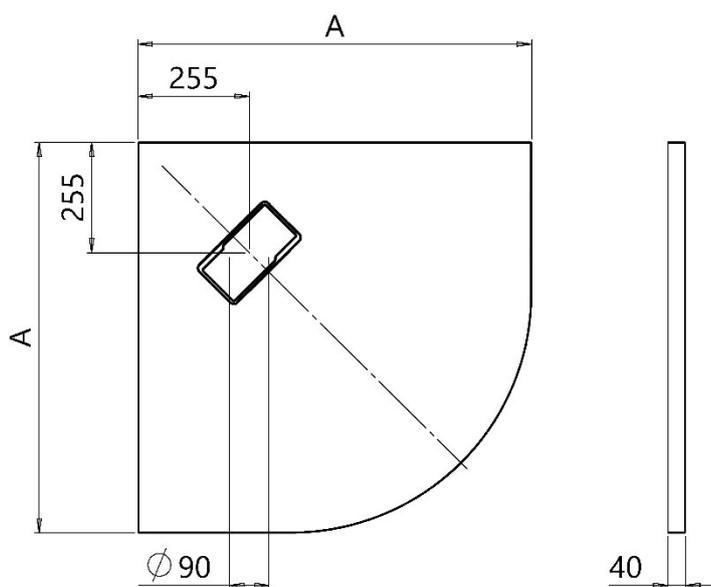


	A
MENORA R90	900
MENORA R100	1000


MENORA AXB

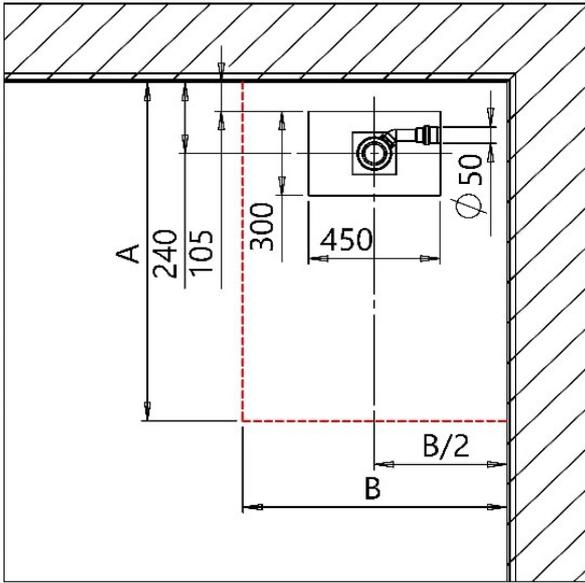

MENORA R

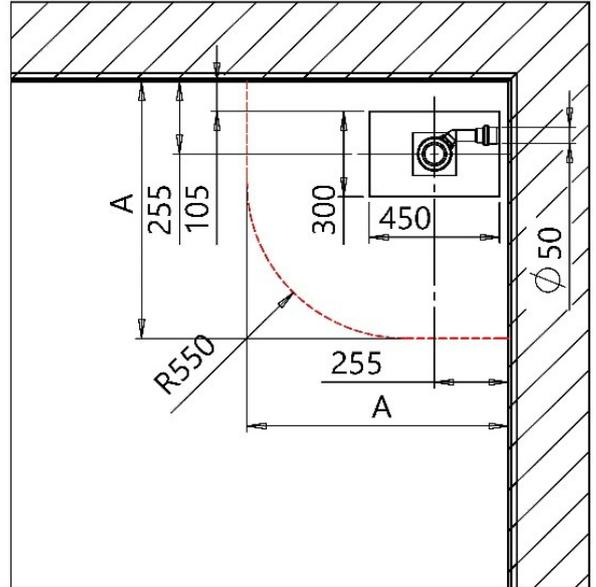

MENORA Q

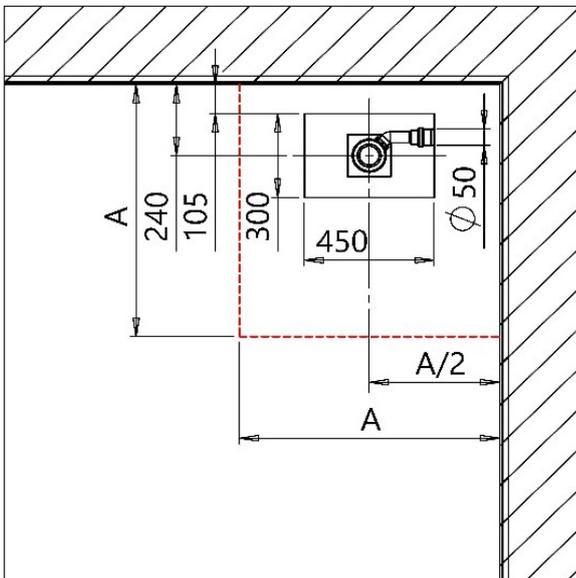

# CUT OPTIONS

