


Ballo



VIDEO




PDF

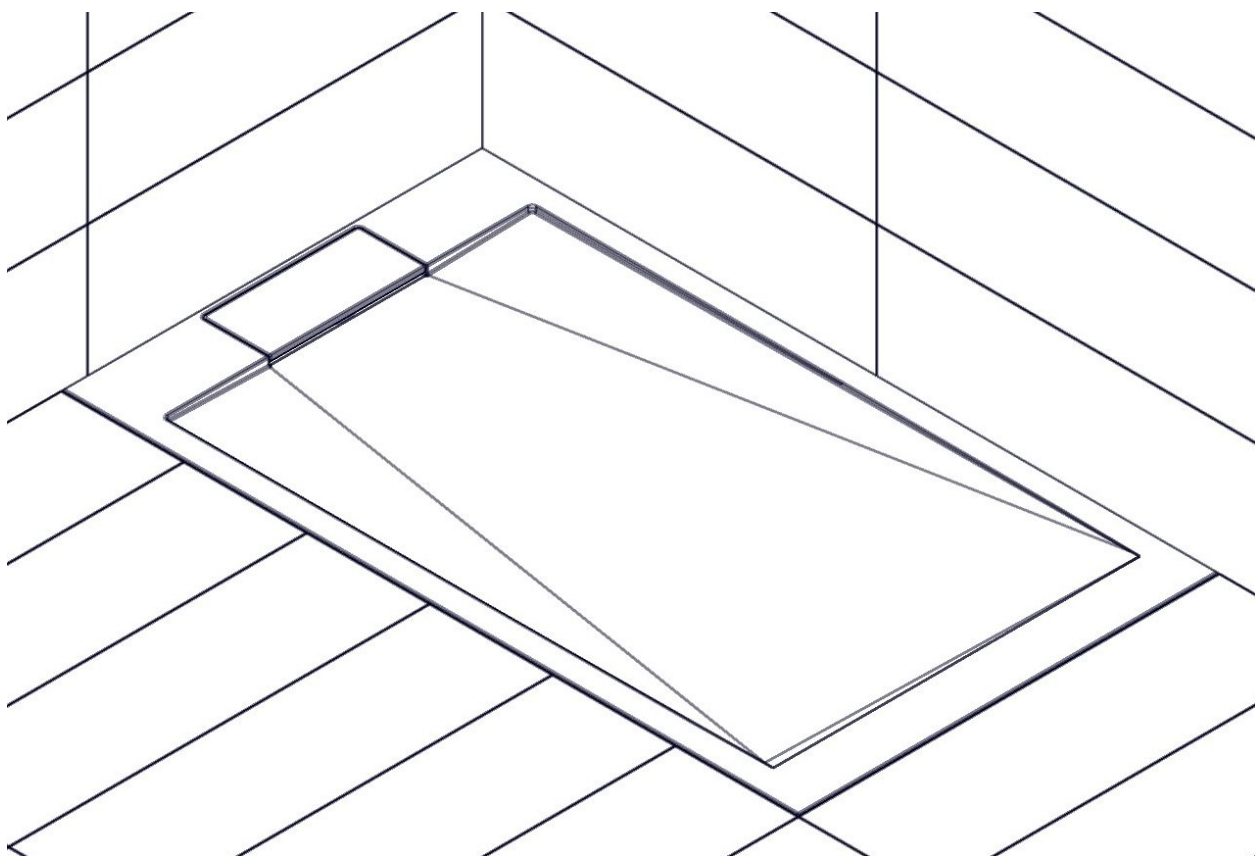




- SI** Tuš kad - navodilo za vgradnjo v tla
- HR** Tuš kada - upute za ugradnju u pod
- CS** Tuš kada - uputstvo za ugradnju u pod
- MK** Туш када - упатства за инсталација(за вградување)
- RU** Душевой поддон - инструкция по установке (встроенная установка)
- UA** Душовий піддон - інструкція з монтажу в підлогу





- HU** Zuhanytálca - beépítési útmutató (beépítés padlóba)
- RO** Cadă de duș - instrucțiuni de instalare (în podea)
- GB** Shower tray - installation instructions (built-in installation)
- DE** Duschwanne - Einbauanleitung (in den Boden)
- IT** Piatto doccia - istruzioni per l'installazione (installazione a incasso)
- FR** Receveur de douche - instructions d'installation (installation encastrée)




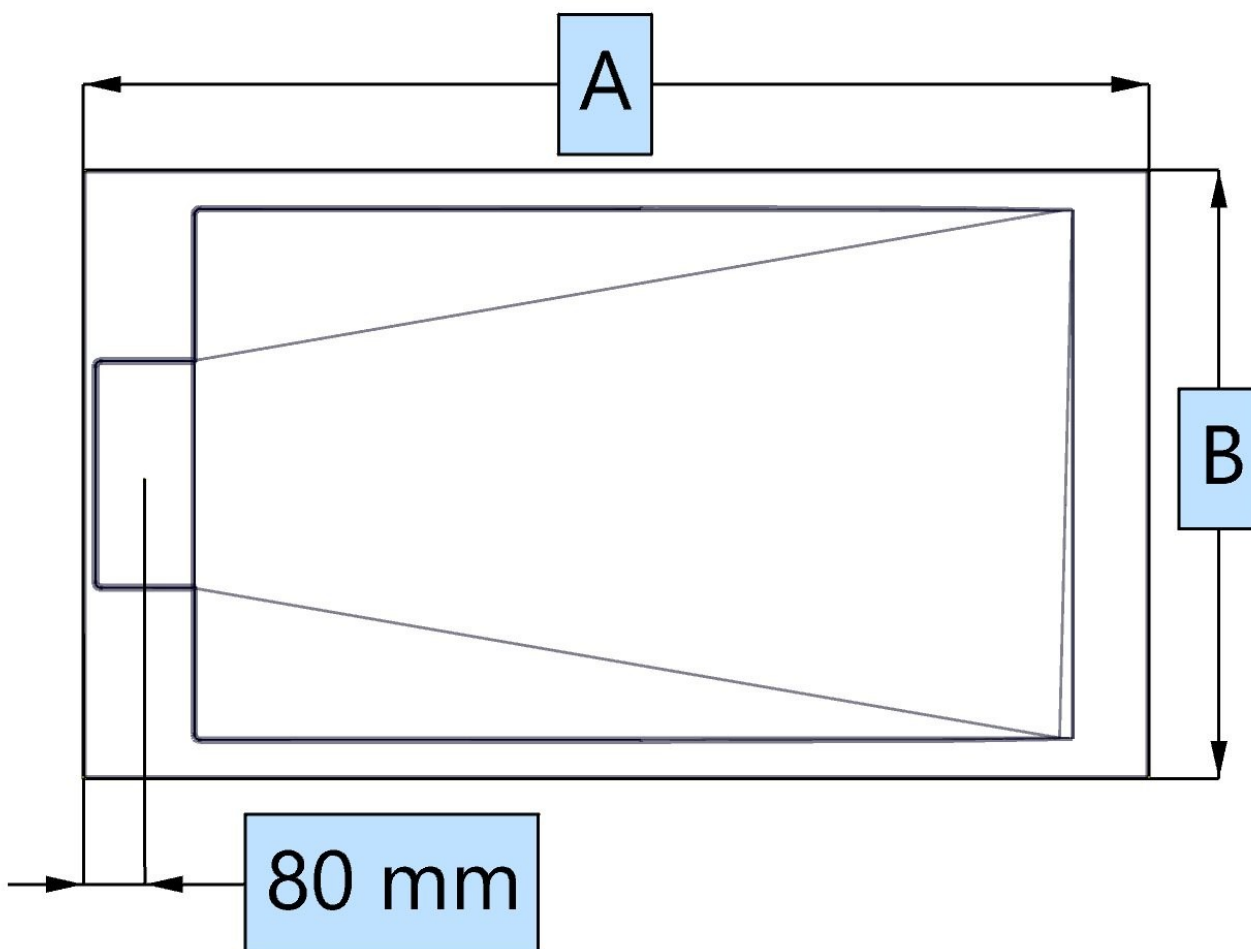






	A	B
BALLO 140X80	1400	800
BALLO 140X90	1400	900
BALLO 140X100	1400	1000
BALLO 200X80	2000	800
BALLO 200X90	2000	900
BALLO 200X100	2000	1000




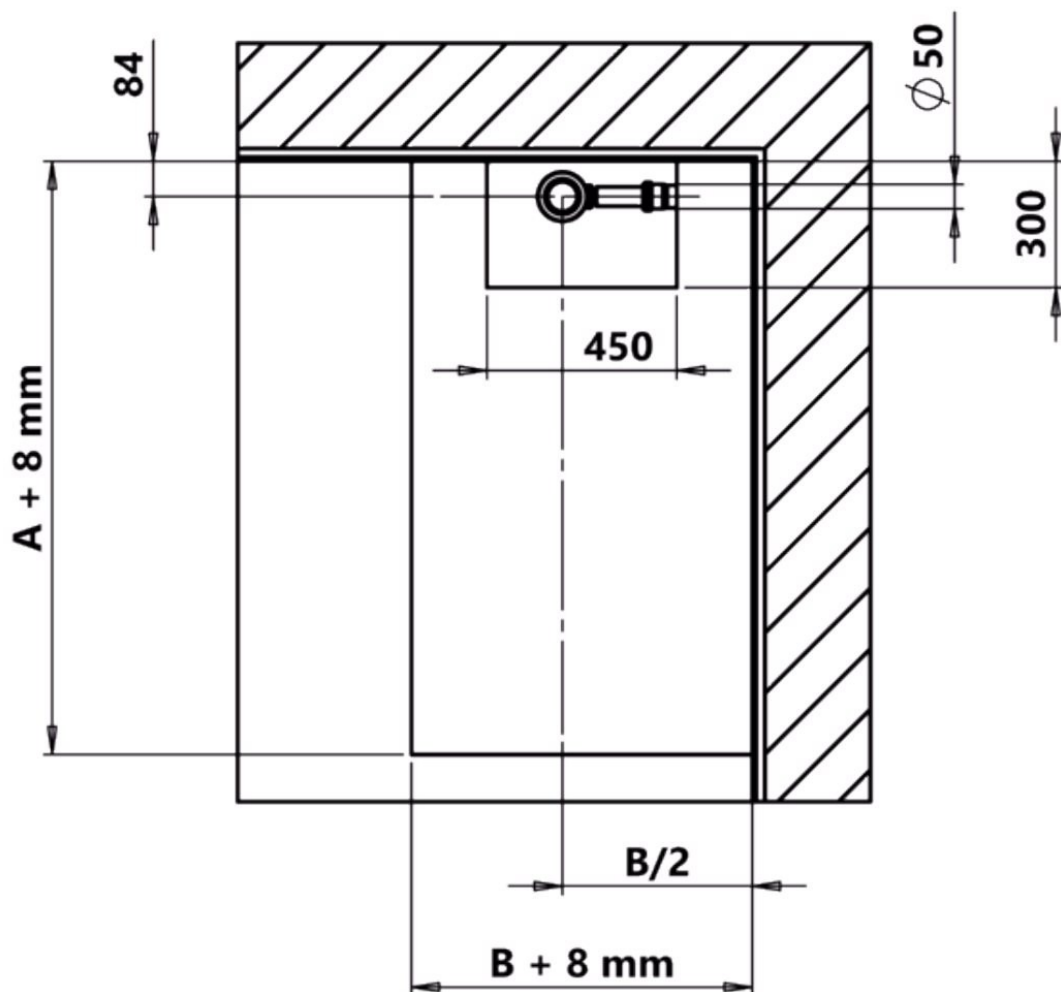




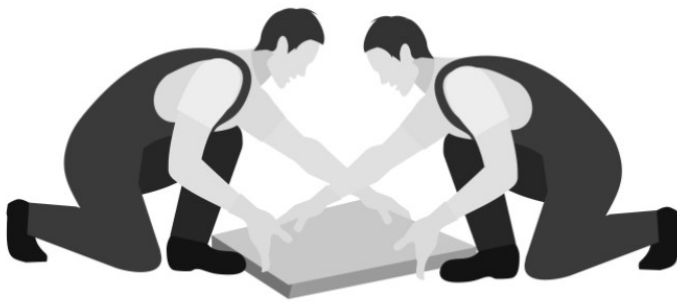
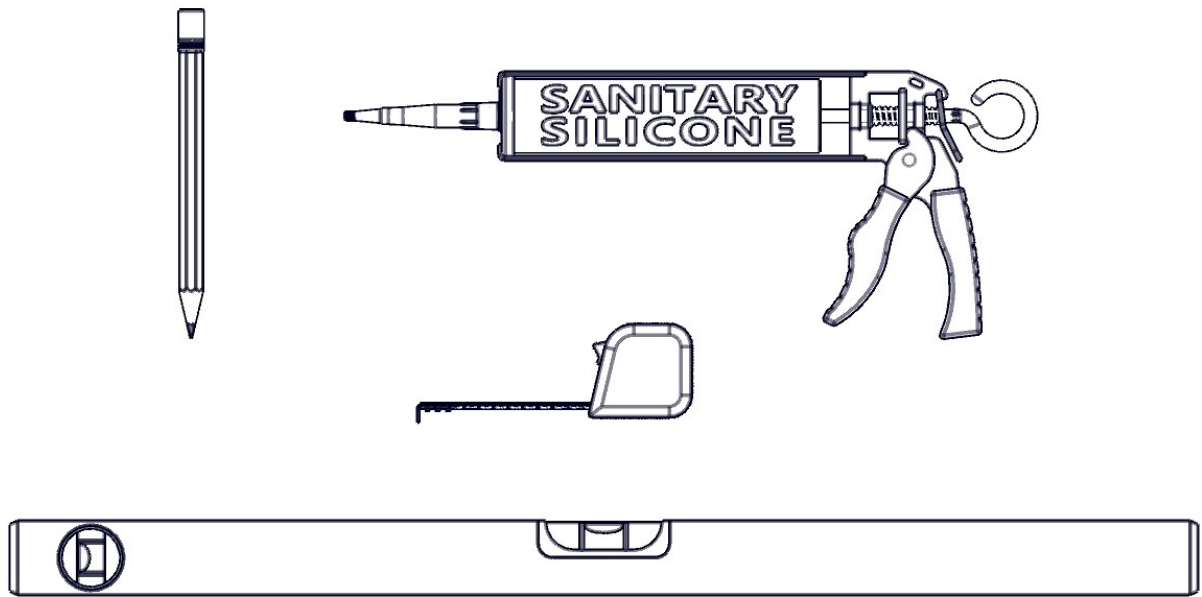


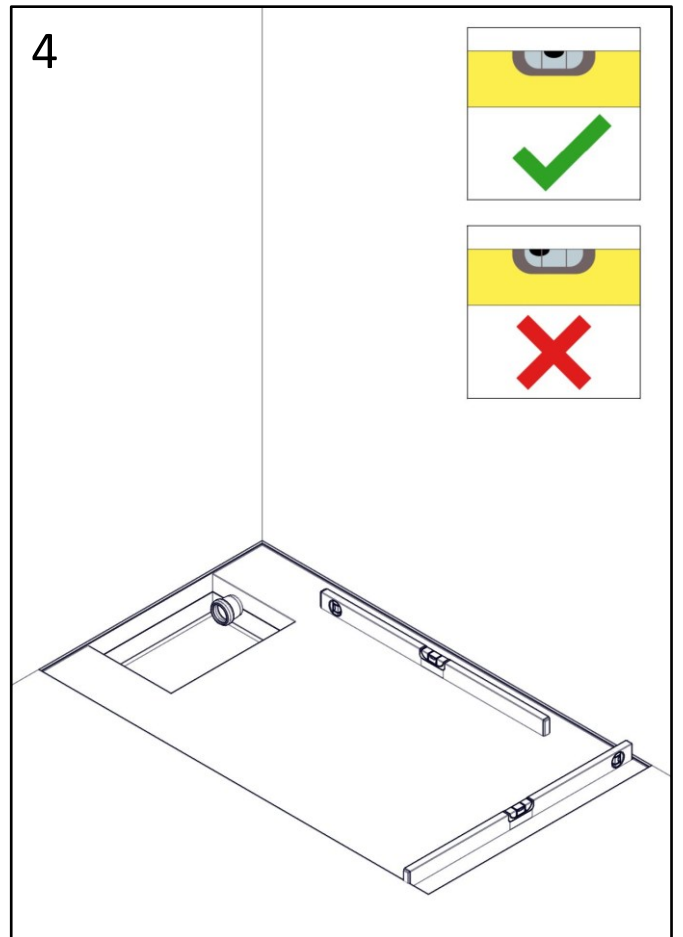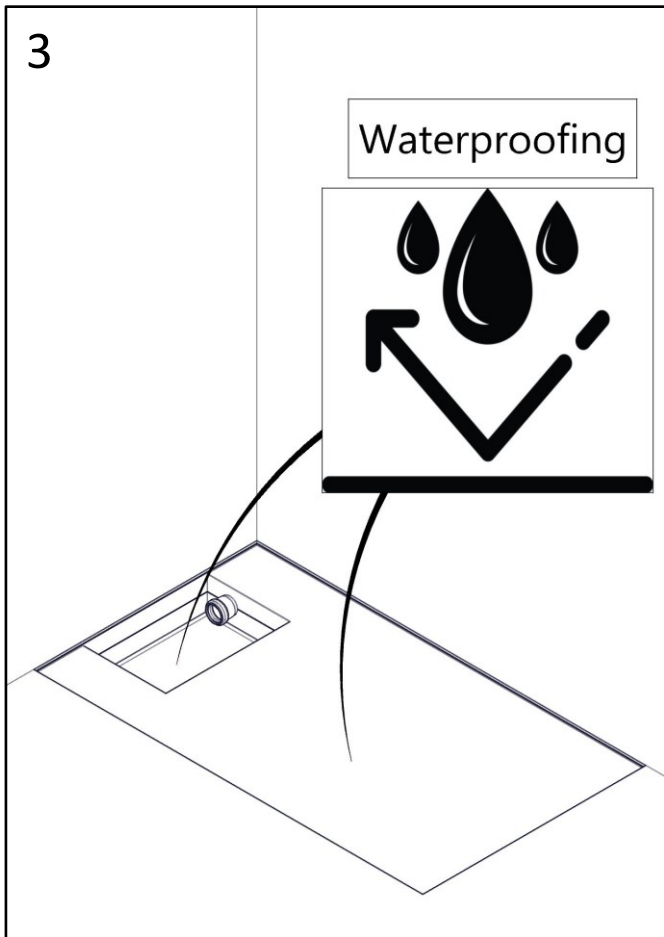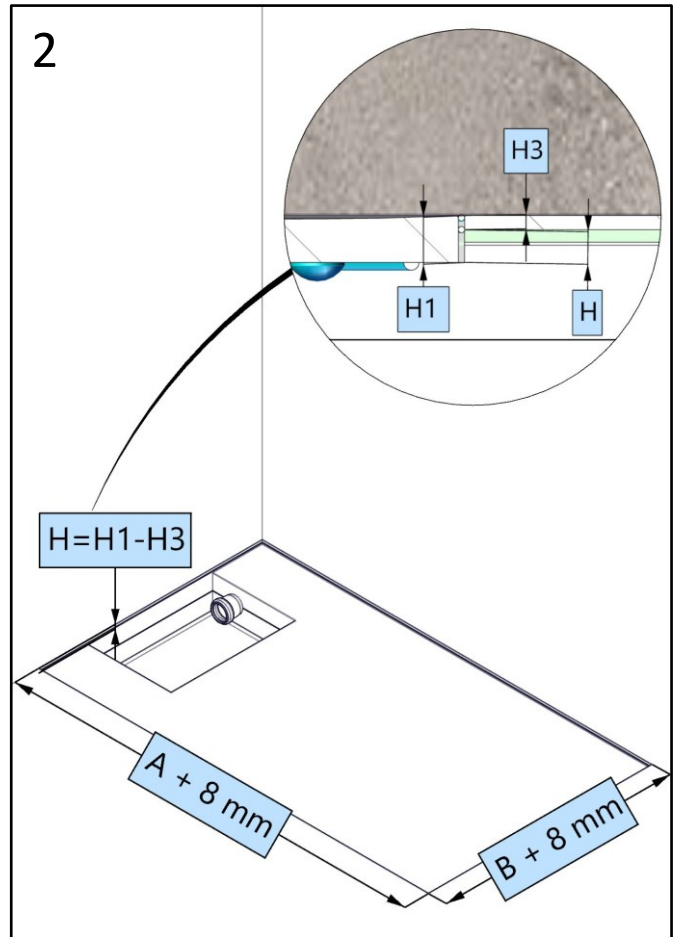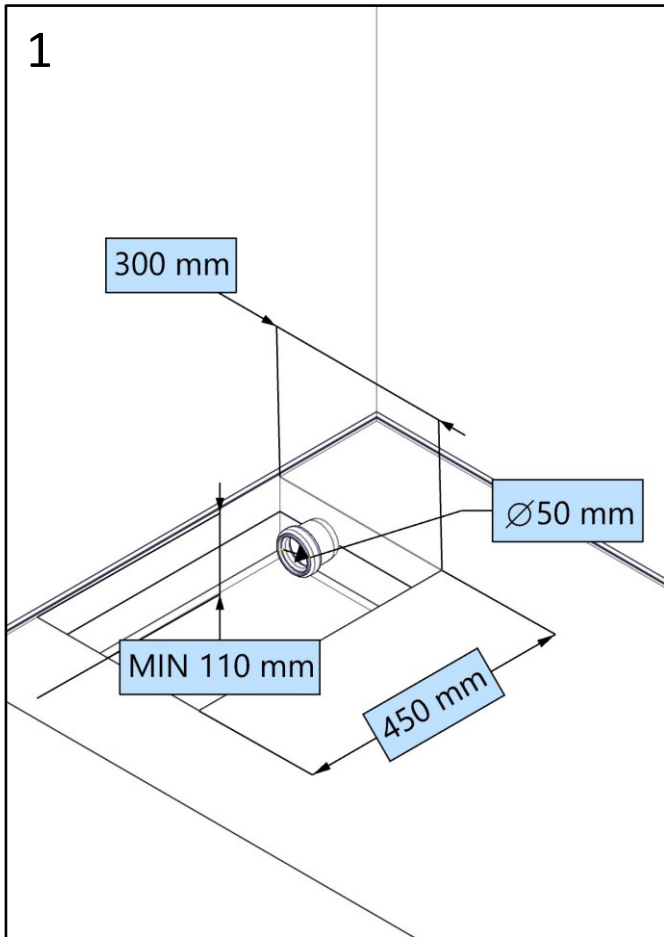

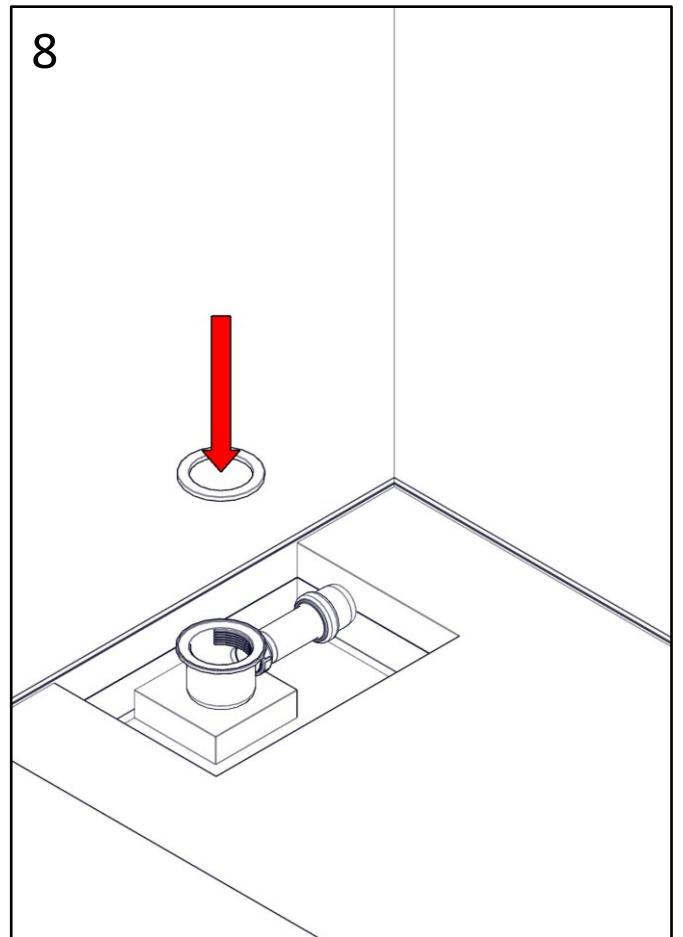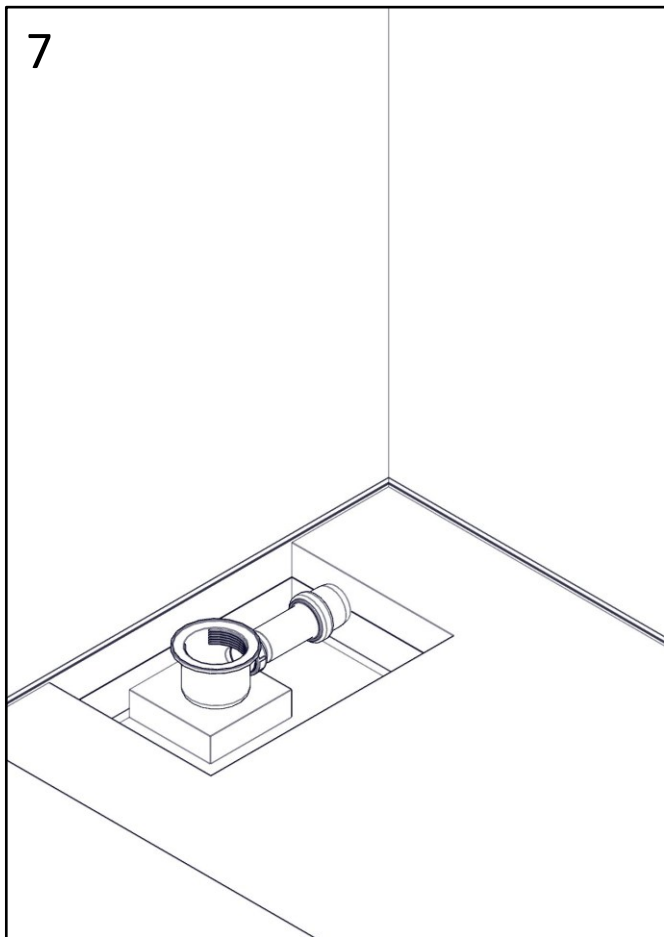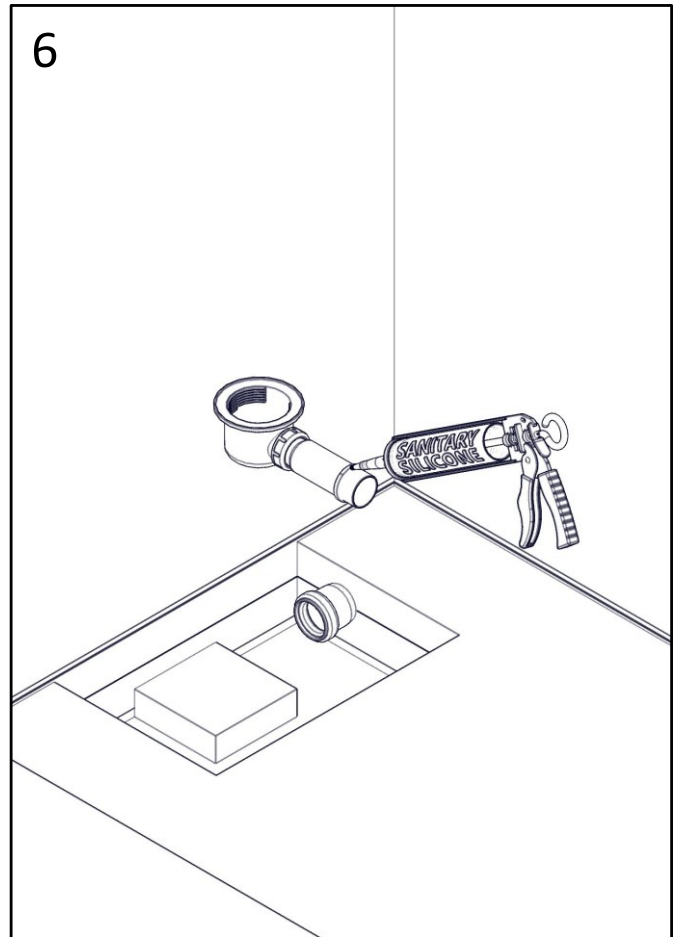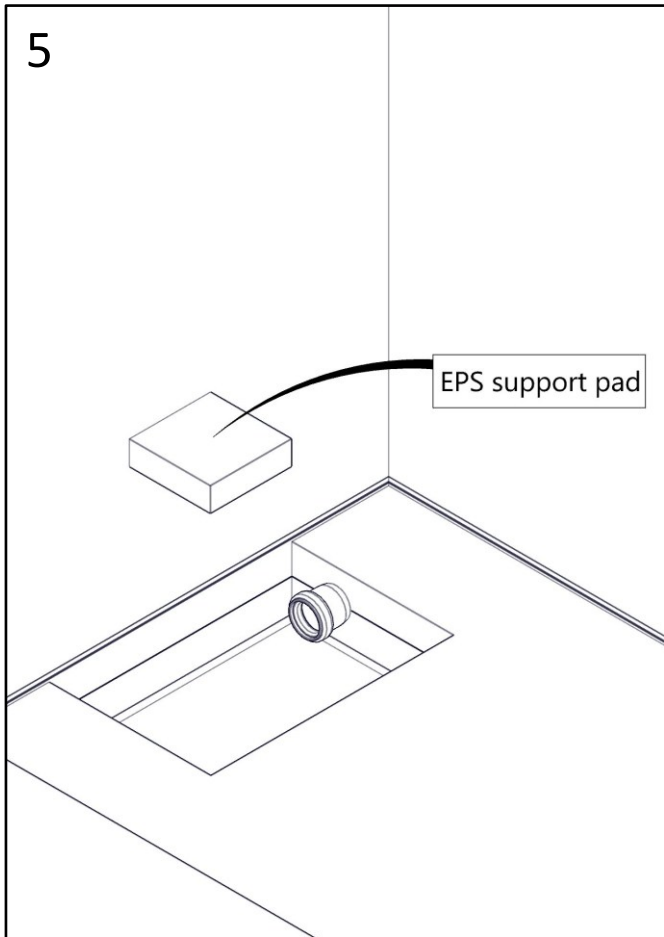

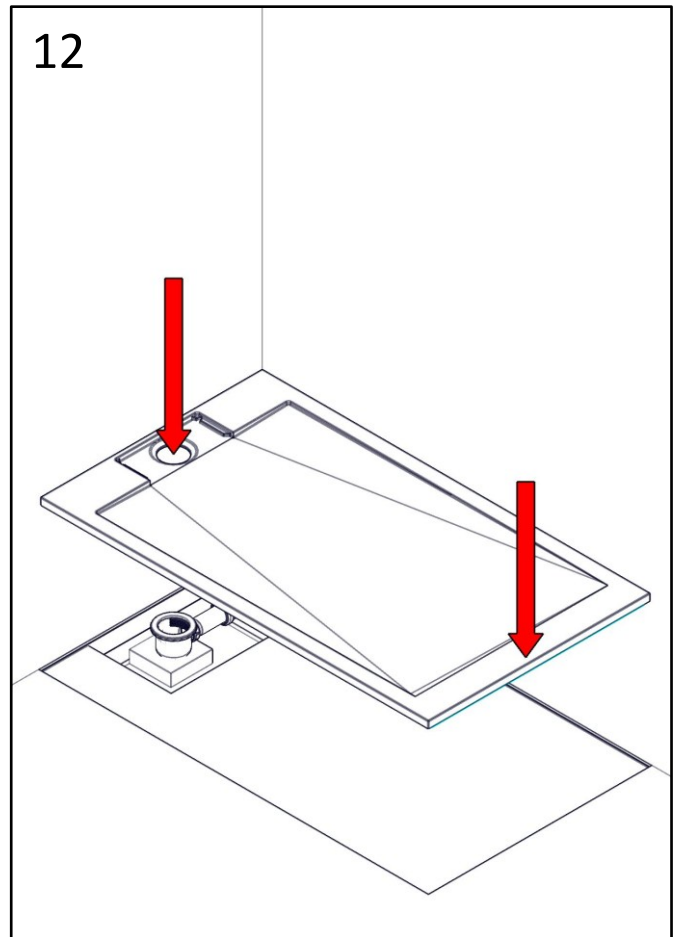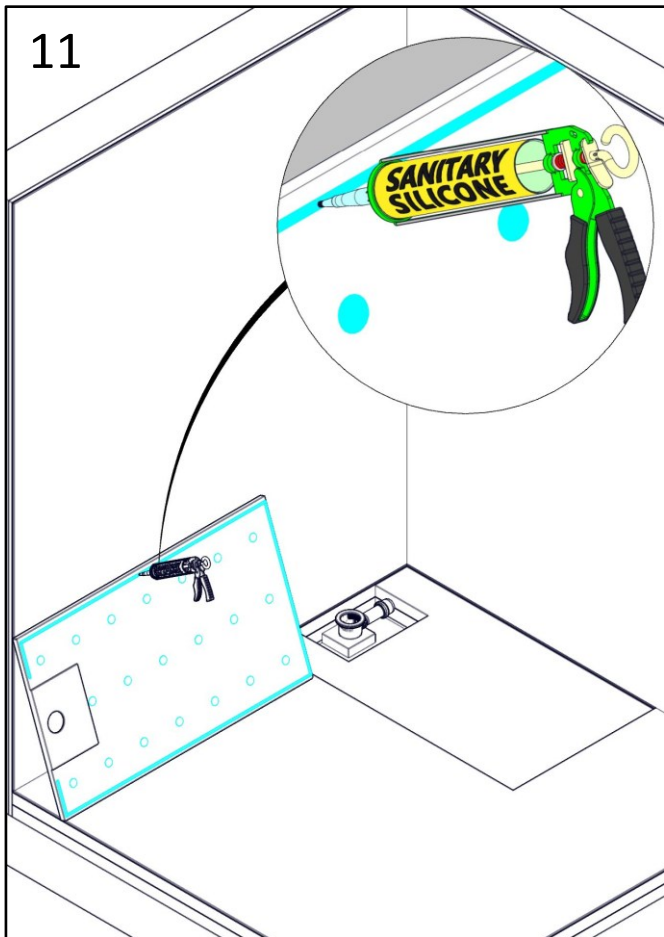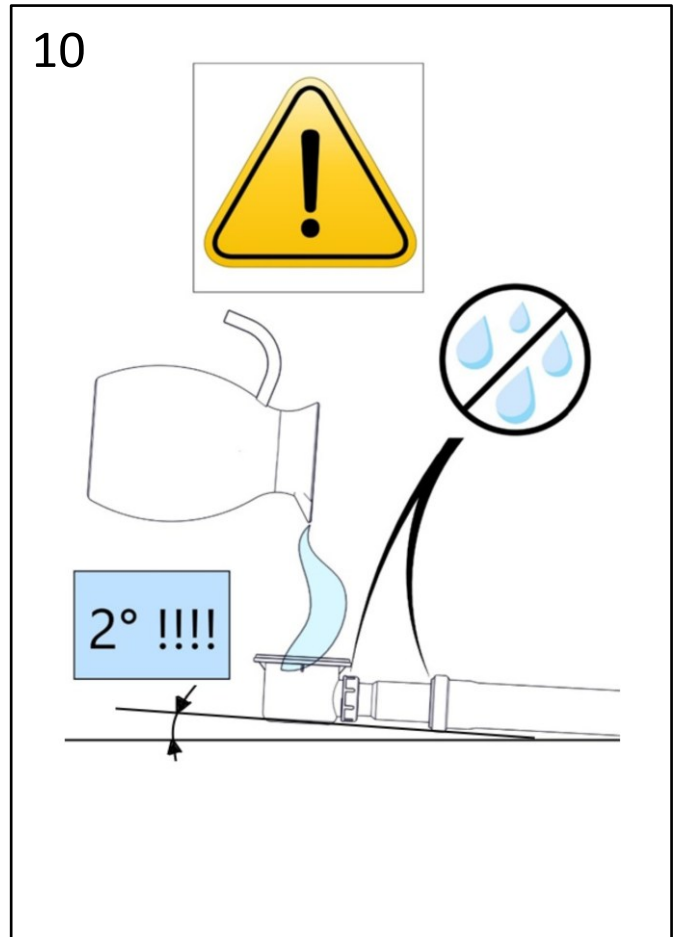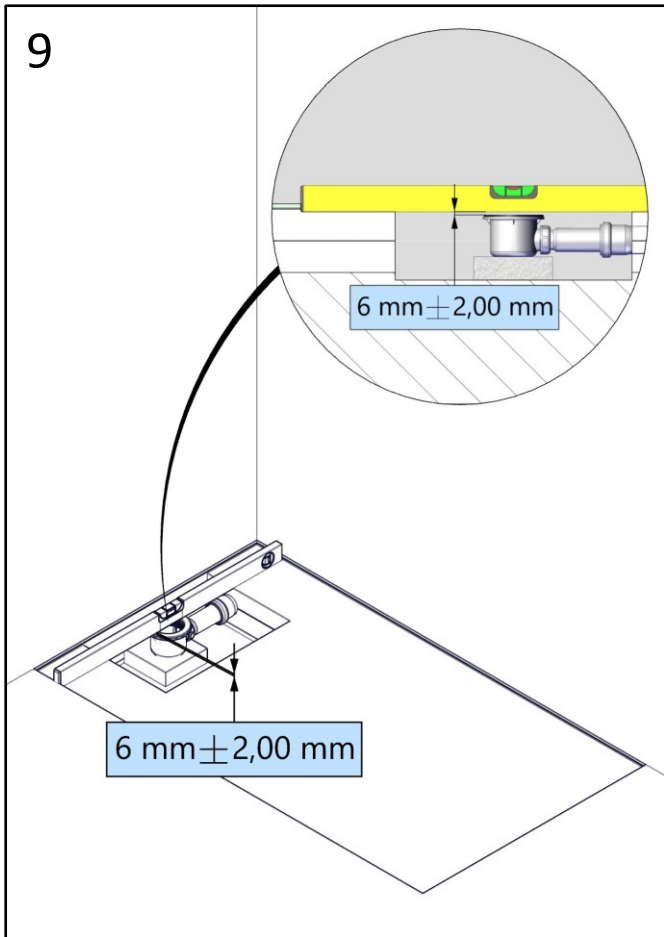

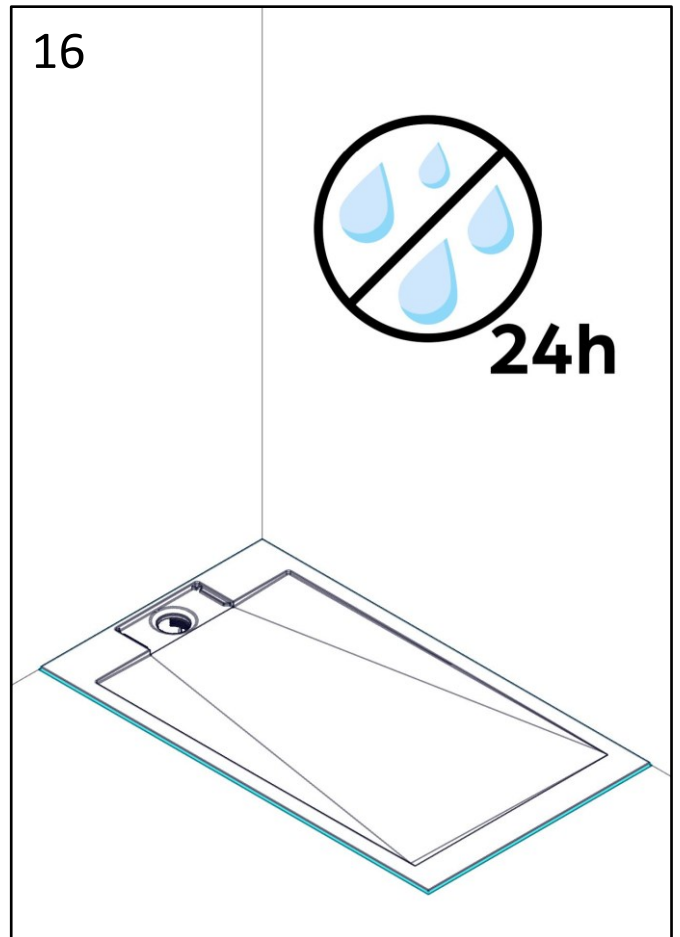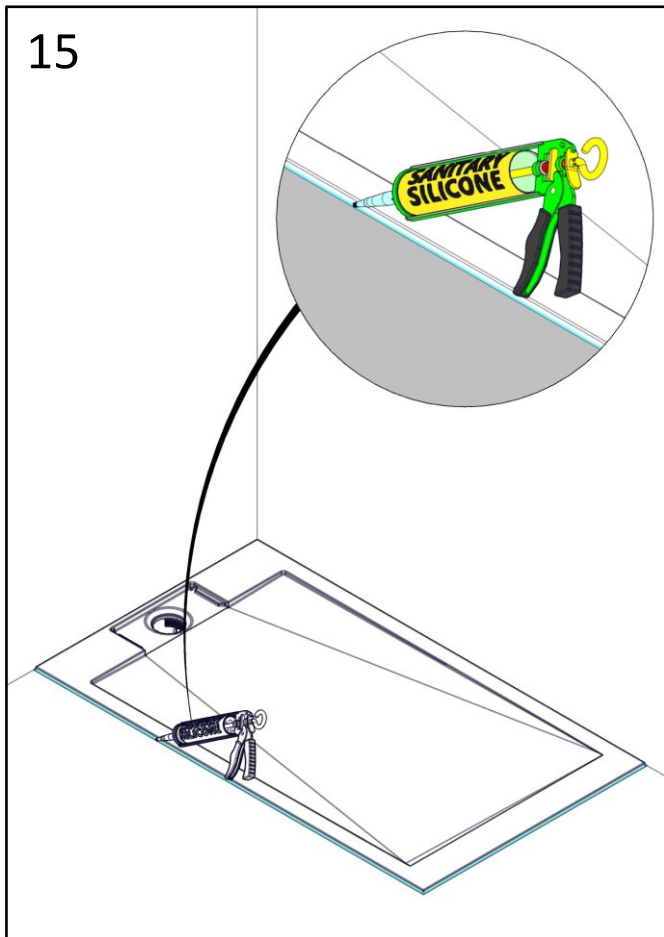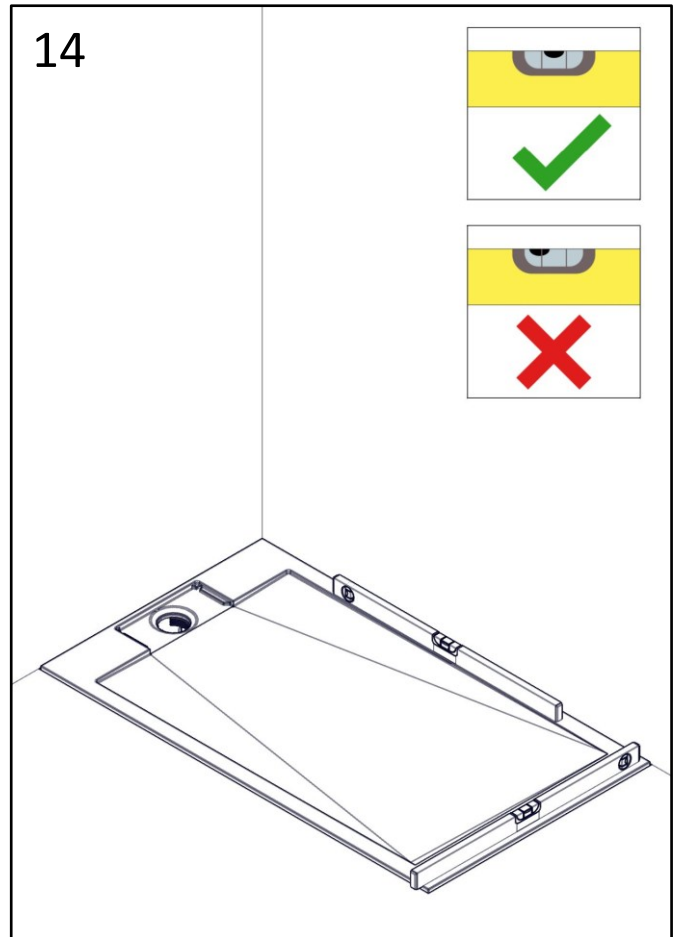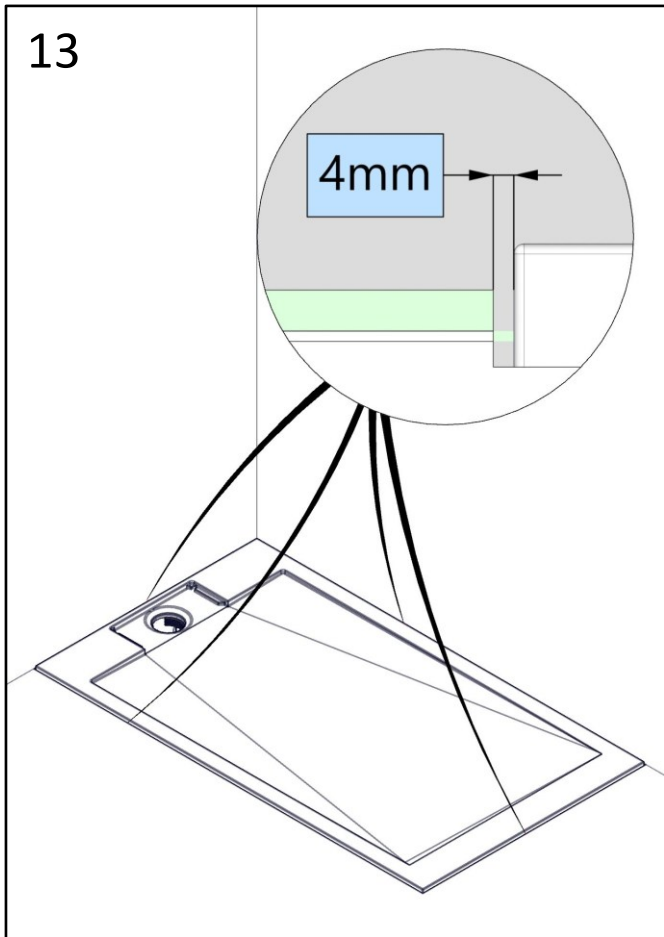

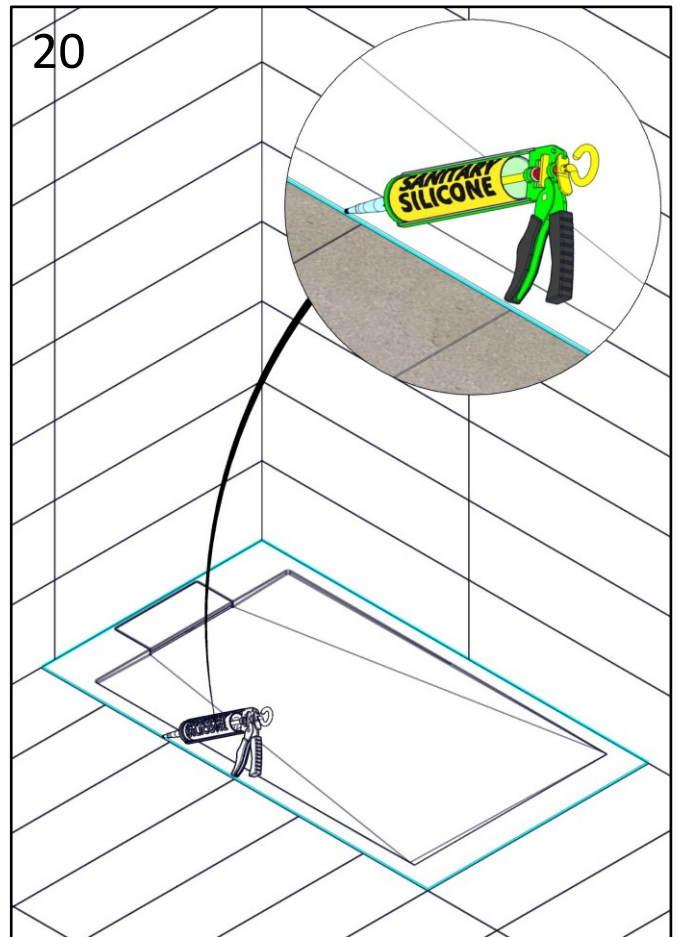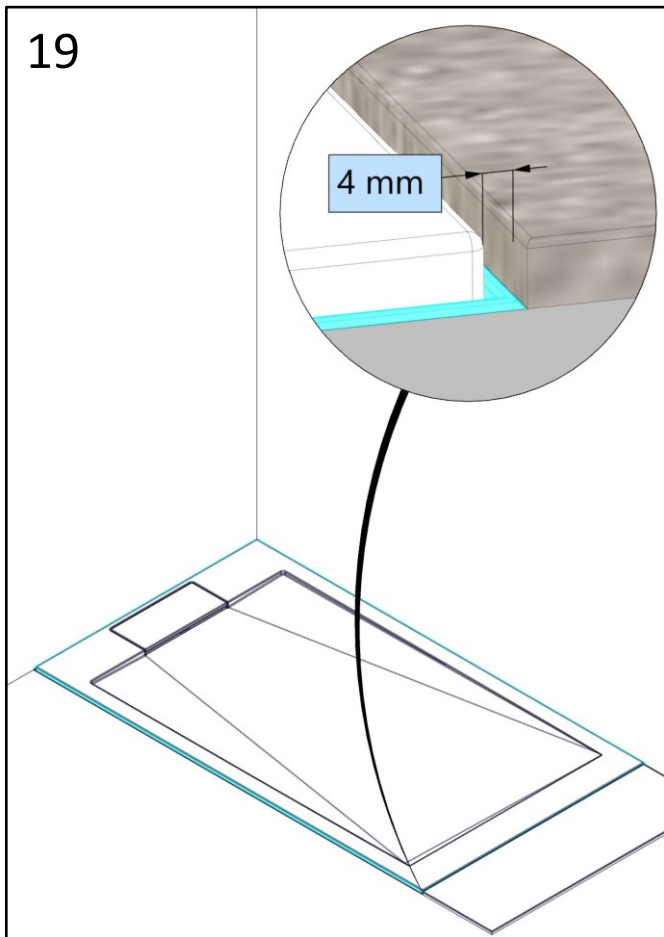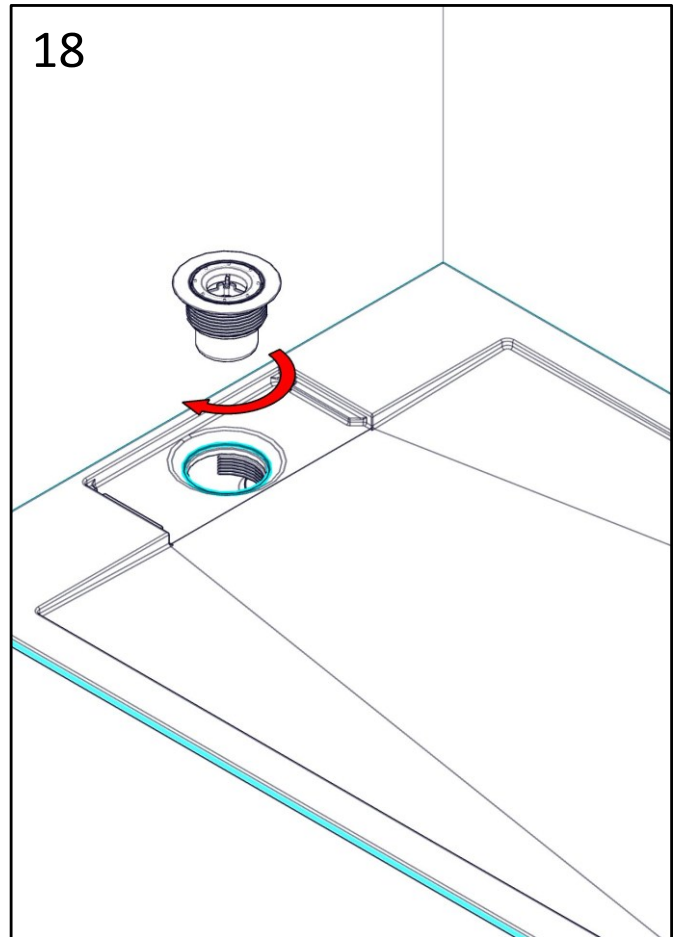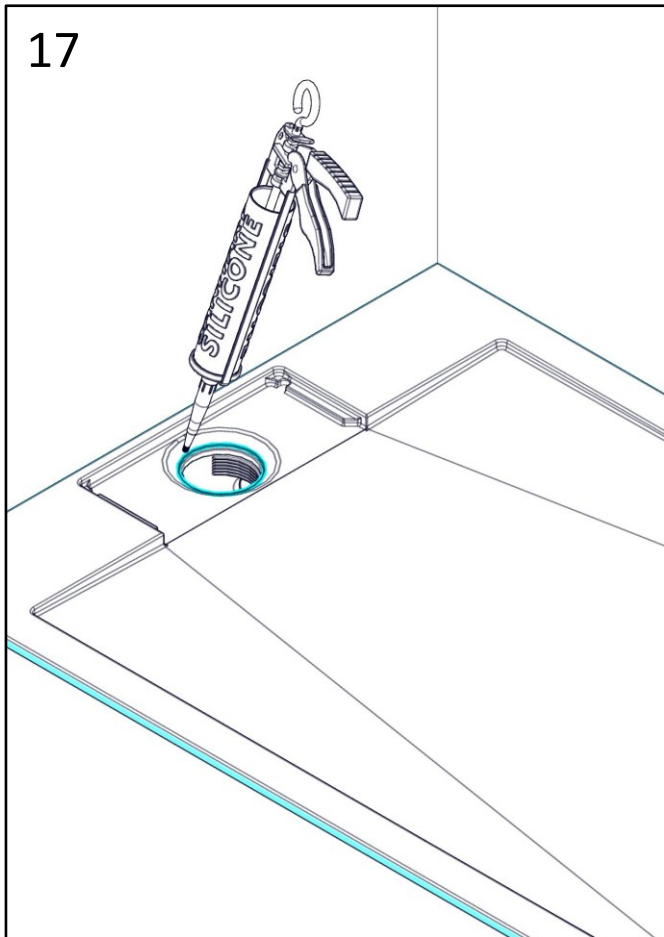

21



24h

