


Hopp



VIDEO




PDF

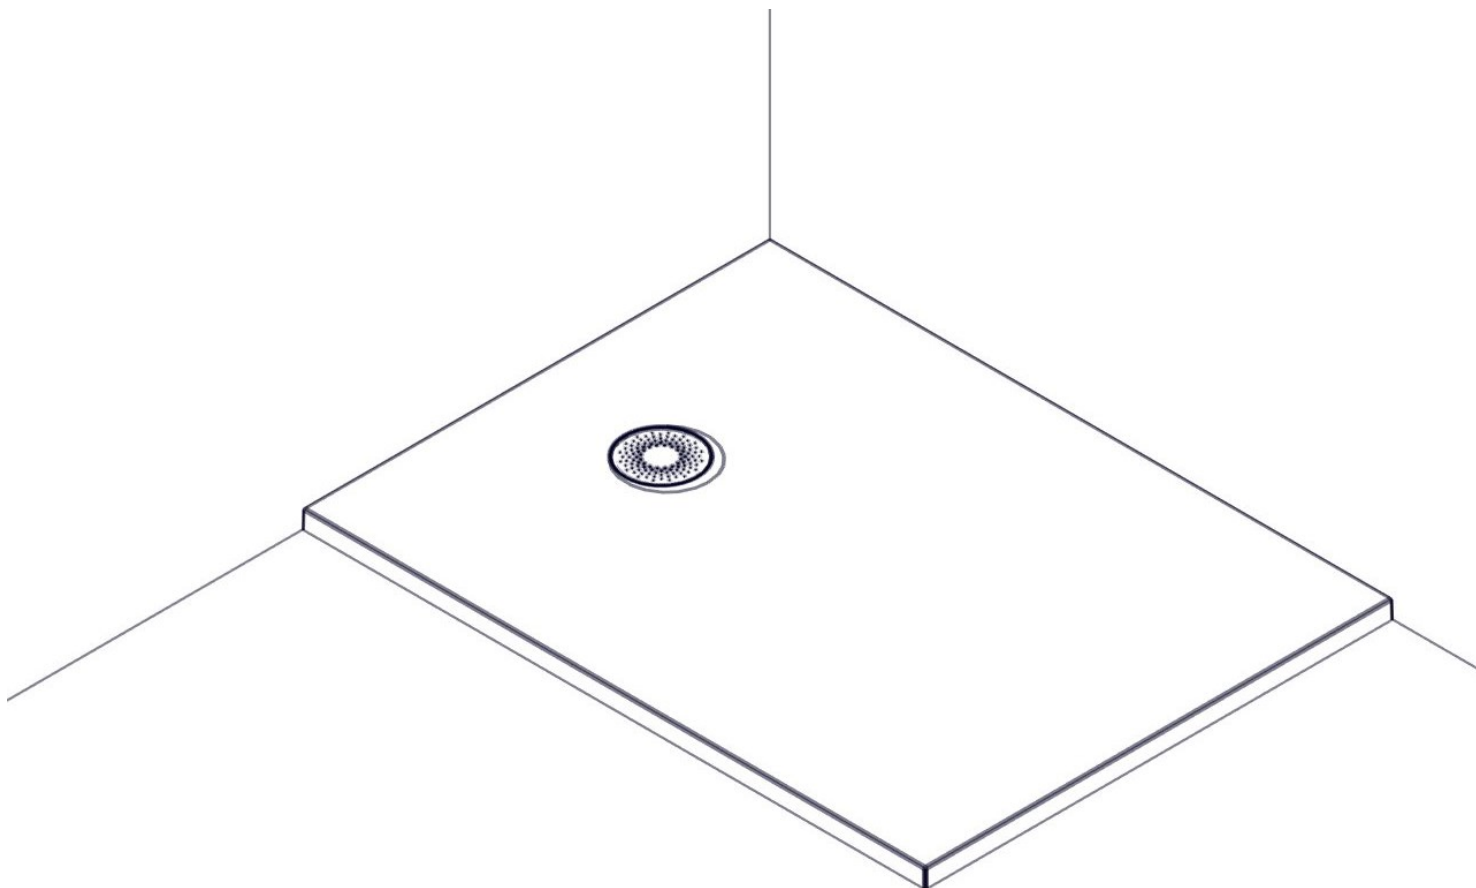


- SI** Tuš kad - navodilo za vgradnjo na tla
- HR** Tuš kada - upute za ugradnju na pod
- SRB** Tuš kada - uputstvo za ugradnju na pod
- MK** Туш када - упатства за инсталација (поставување на под)
- RU** Душевой поддон - инструкция по установке (установке на пол)
- UA** Душовий піддон - інструкція з монтажу на підлогу


- HU** Zuhanytálca - beépítési útmutató (beépítés padlóra)
- RO** Cadă de duș - instrucțiuni de instalare (pe podea)
- GB** Shower tray - installation instructions (raised installation)
- DE** Duschwanne - Einbauanleitung (Bodenaufstellung)
- IT** Piatto doccia - istruzioni per l'installazione (installazione in appoggio)
- FR** Receveur de douche - instructions d'installation (installation posée)

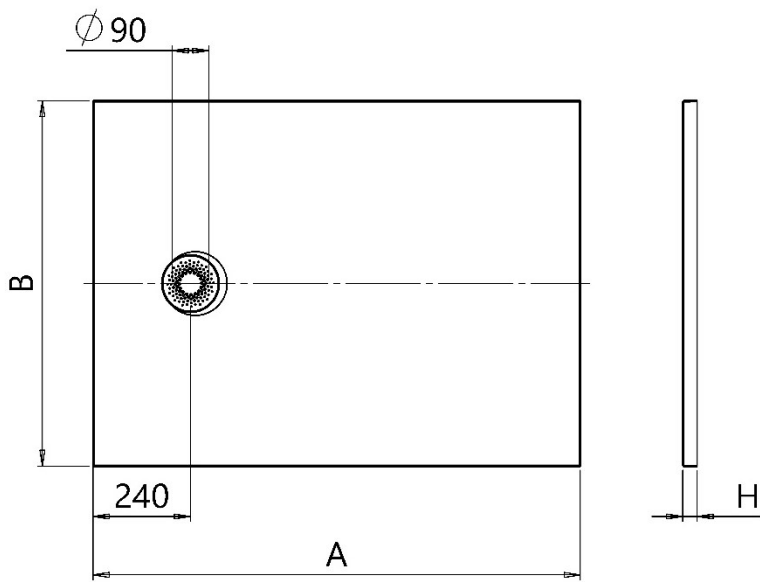

	A	B	H
HOPP 90X70	900	700	35
HOPP 90X80	900	800	35
HOPP 100X80	1000	800	35
HOPP 100X90	1000	900	35
HOPP 120X70	1200	700	35
HOPP 120X80	1200	800	35
HOPP 120X90	1200	900	35
HOPP 120X100	1200	1000	35
HOPP 140X70	1400	700	35
HOPP 140X80	1400	800	35
HOPP 140X90	1400	900	35
HOPP 140X100	1400	1000	35
HOPP 160X80	1600	800	35
HOPP 160X90	1600	900	35
HOPP 180X80	1800	800	35
HOPP 180X90	1800	900	35
HOPP 200X80	2000	800	35
HOPP 200X90	2000	900	35

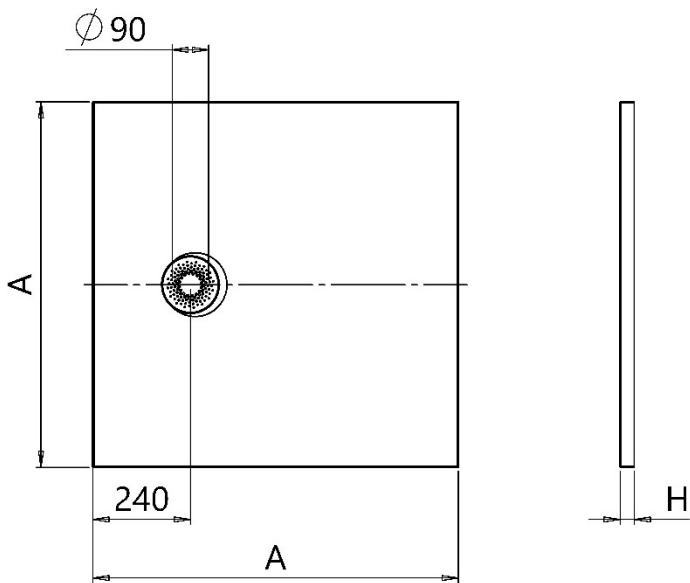


	A	H
HOPP 80X80	800	35
HOPP 90X90	900	35
HOPP 100X100	1000	35

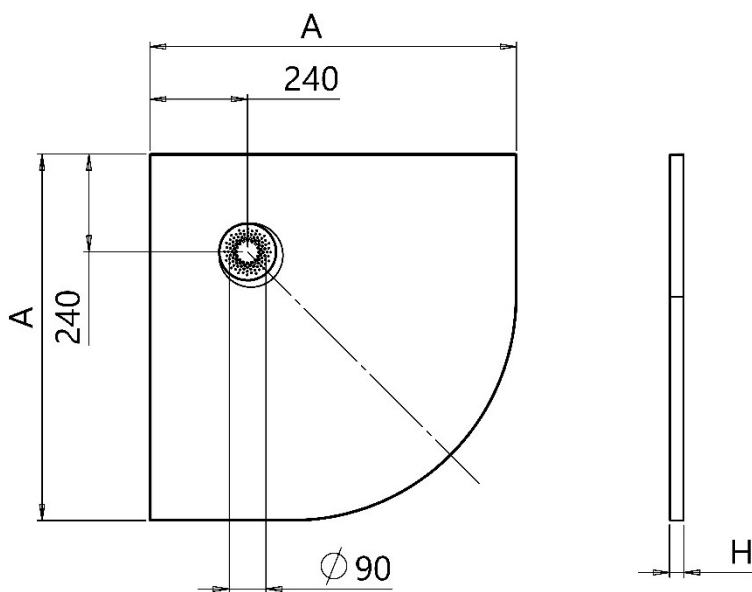


	A	H
HOPP 90X90 R550	900	35
HOPP 100X100 R550	1000	35

HOPP AXB

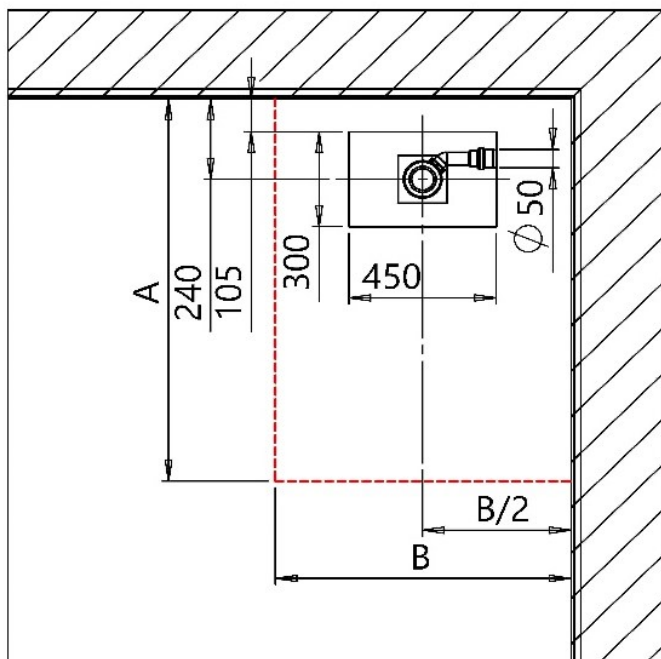

HOPP R

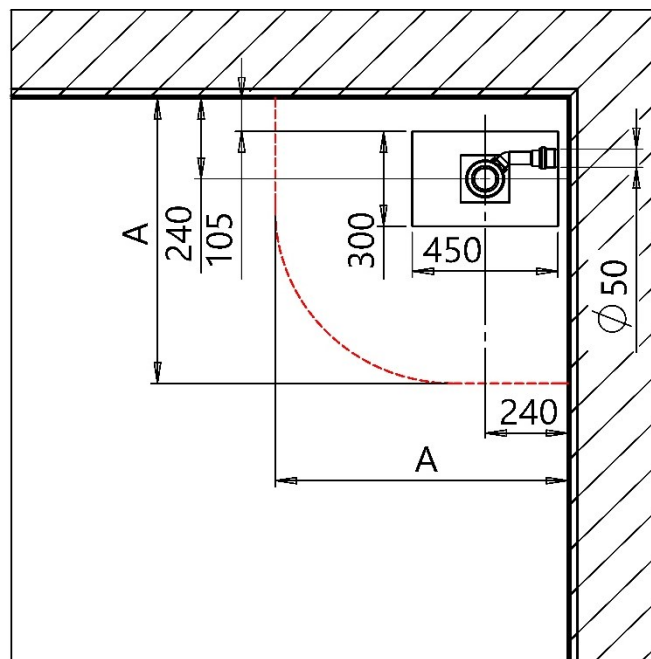

HOPP Q

