


Tobas




PDF

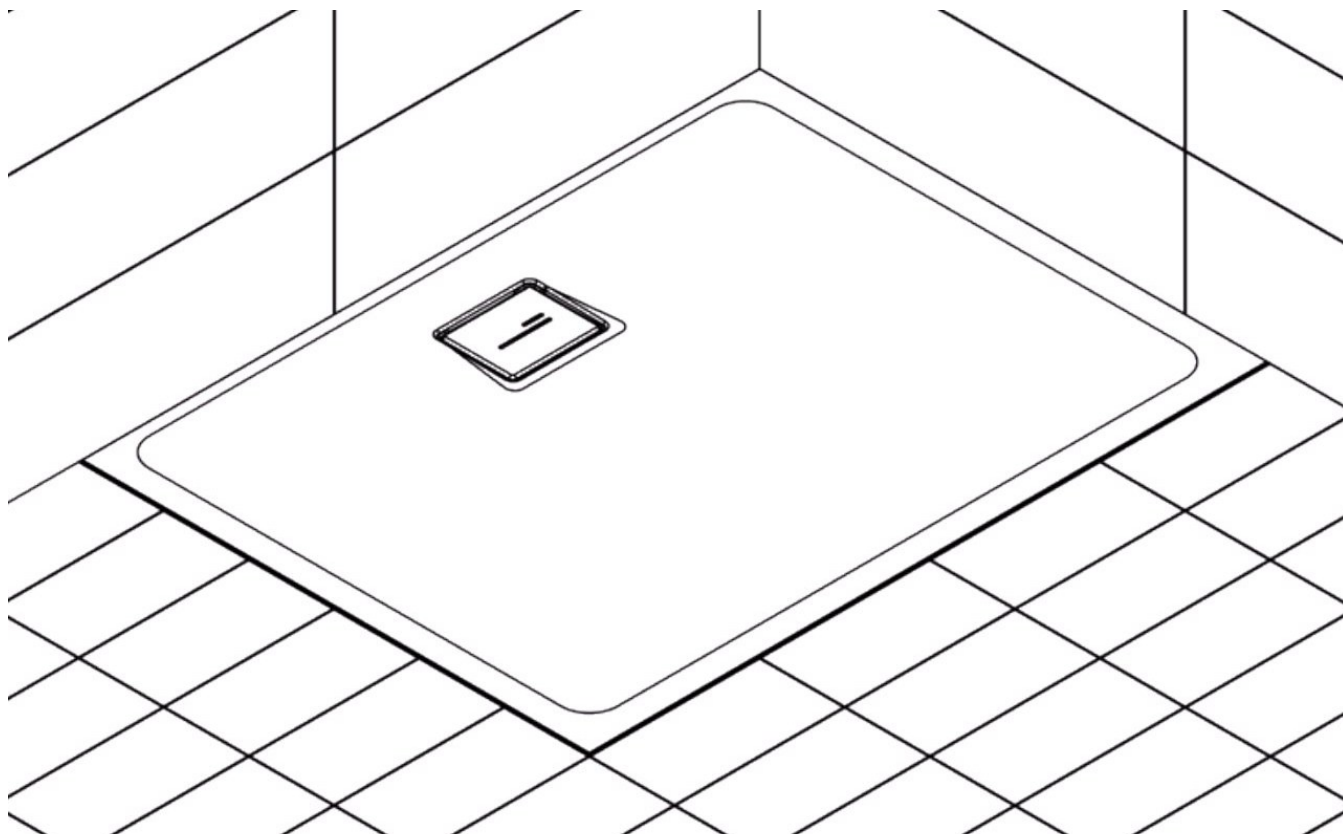

- SI** Tuš kad - navodilo za vgradnjo v tla
- HR** Tuš kada - upute za ugradnju u pod
- CS** Tuš kada - uputstvo za ugradnju u pod
- MK** Туш када - упатства за инсталација(за вградување)
- RU** Душевой поддон - инструкция по установке (встроенная установка)
- UA** Душовий піддон - інструкція з монтажу в підлогу

- HU** Zuhanytálca - beépítési útmutató (beépítés padlóba)
- RO** Cadă de duș - instrucțiuni de instalare (în podea)
- GB** Shower tray - installation instructions (built-in installation)
- DE** Duschwanne - Einbauanleitung (in den Boden)
- IT** Piatto doccia - istruzioni per l'installazione (installazione a incasso)
- FR** Receveur de douche - instructions d'installation (installation encastrée)

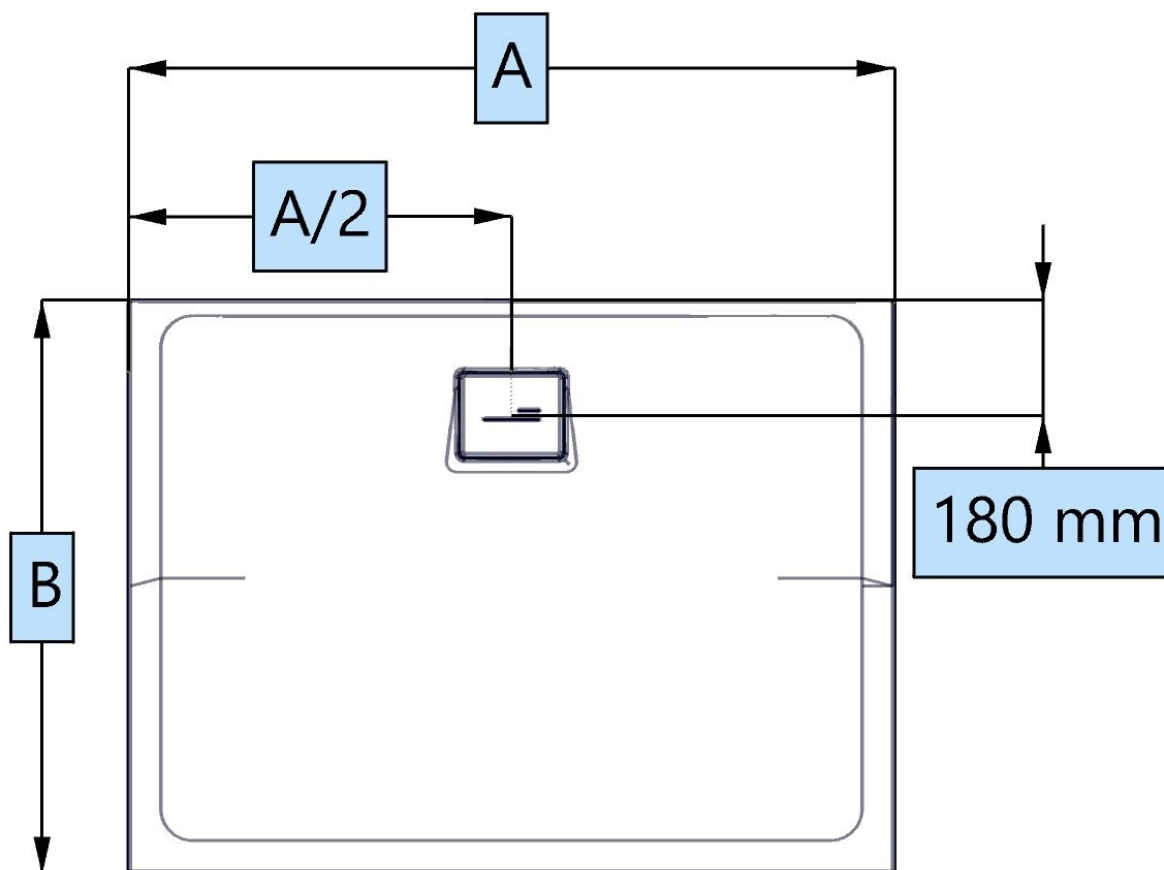

	A	B
TOBAS 90X90	900	900
TOBAS 100X80	1000	800
TOBAS 100X90	1000	900
TOBAS 120X80	1200	800
TOBAS 120X90	1200	900
TOBAS 140X80	1400	800
TOBAS 140X90	1400	900

