


# Polaris BS 80



video




PDF

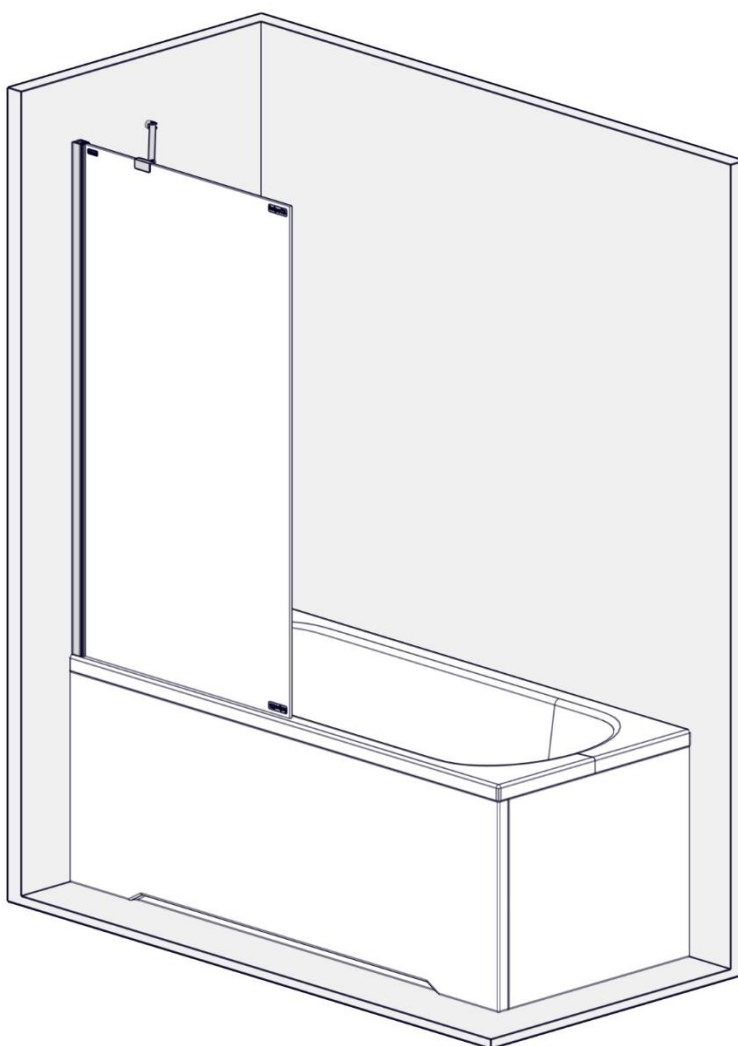



**SI** Tuš kabina - priporočilo za montažo  
**HR** Preporuke za montažu tuš kabine  
**SRB** Preporuke za montažu tuš kabine  
**MK** Препораки за монтажа на туш кабина  
**RU** Рекомендации по сборке душевой кабины  
**UA** Рекомендації щодо монтажу душевої kabini

**HU** Zuhanykabin összeszerelési javaslatok  
**RO** Recomandări de asamblare a cabinei de duș  
**GB** Shower enclosure assembly recommendations  
**DE** Aufbauempfehlungen für die Duschkabine  
**IT** Raccomandazioni per il montaggio della cabina doccia  
**FR** Recommandations pour le montage de la cabine de douche


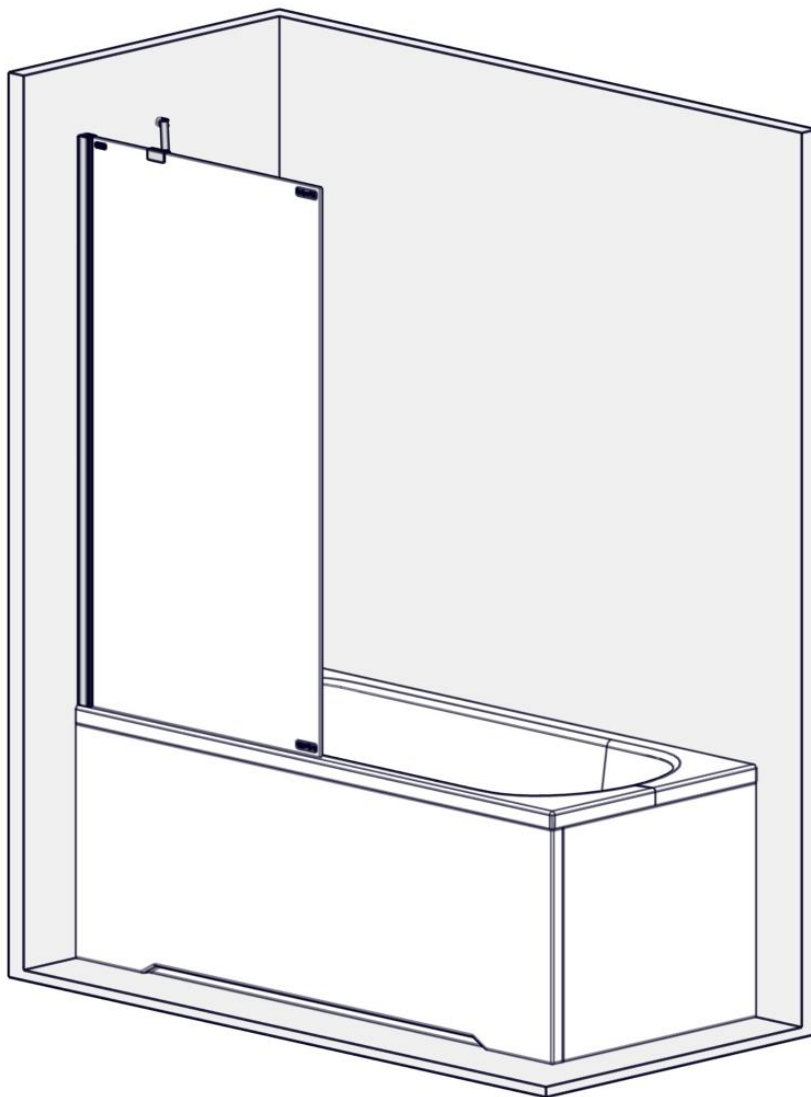





LEFT OPTION


RIGHT OPTION



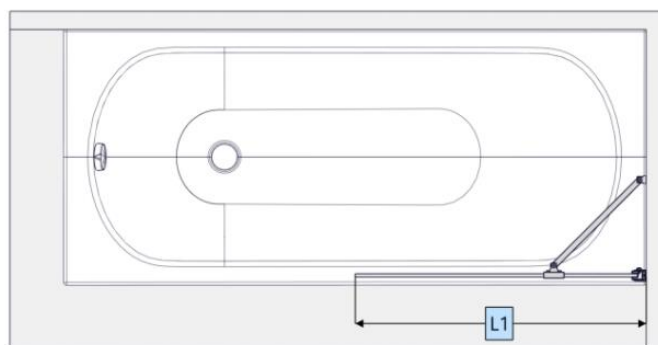
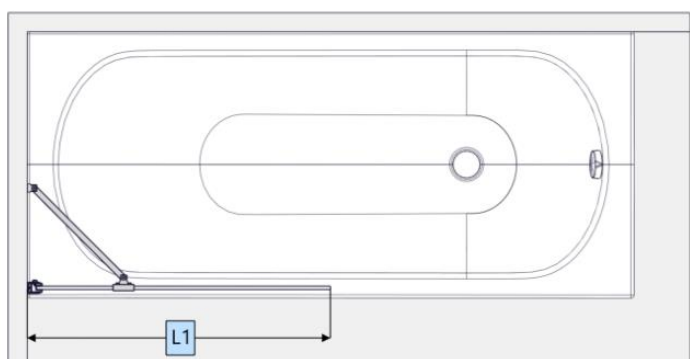





|       |     |      |
|-------|-----|------|
|       | L1  | ↑    |
| BS 80 | 800 | 1400 |




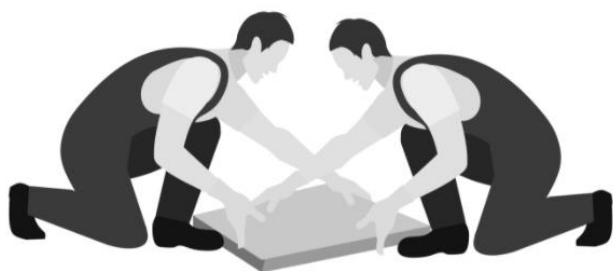
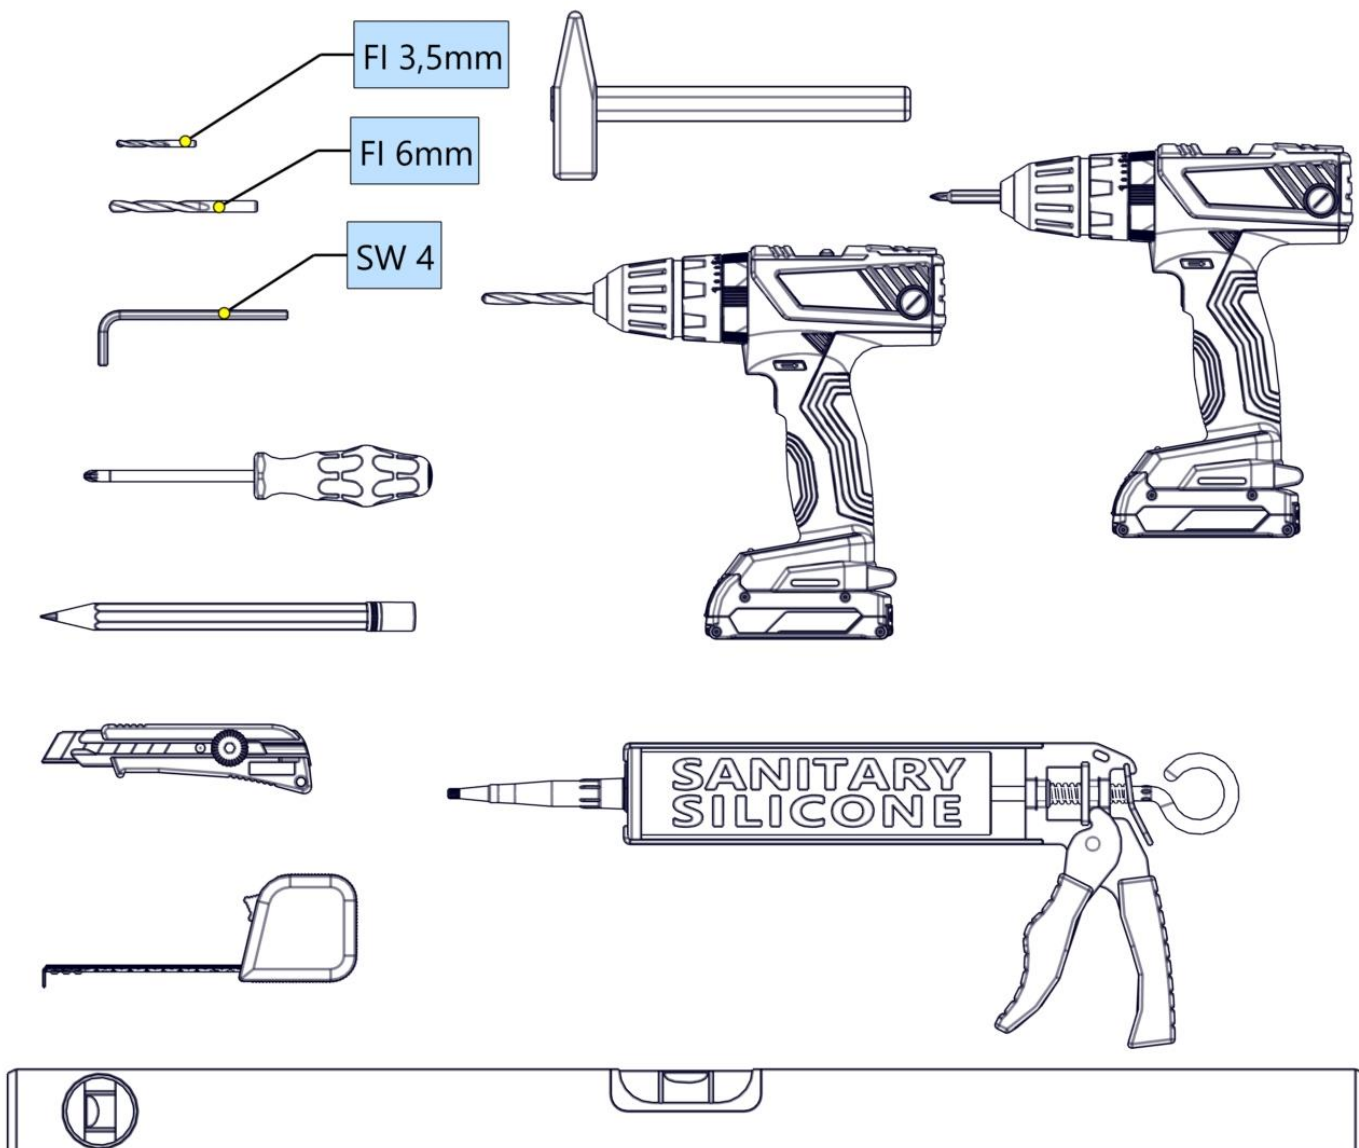


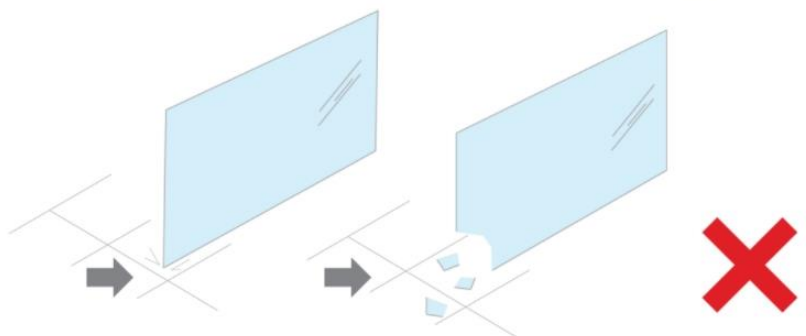
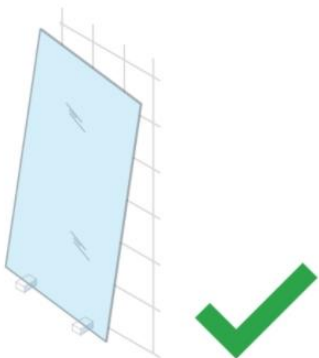
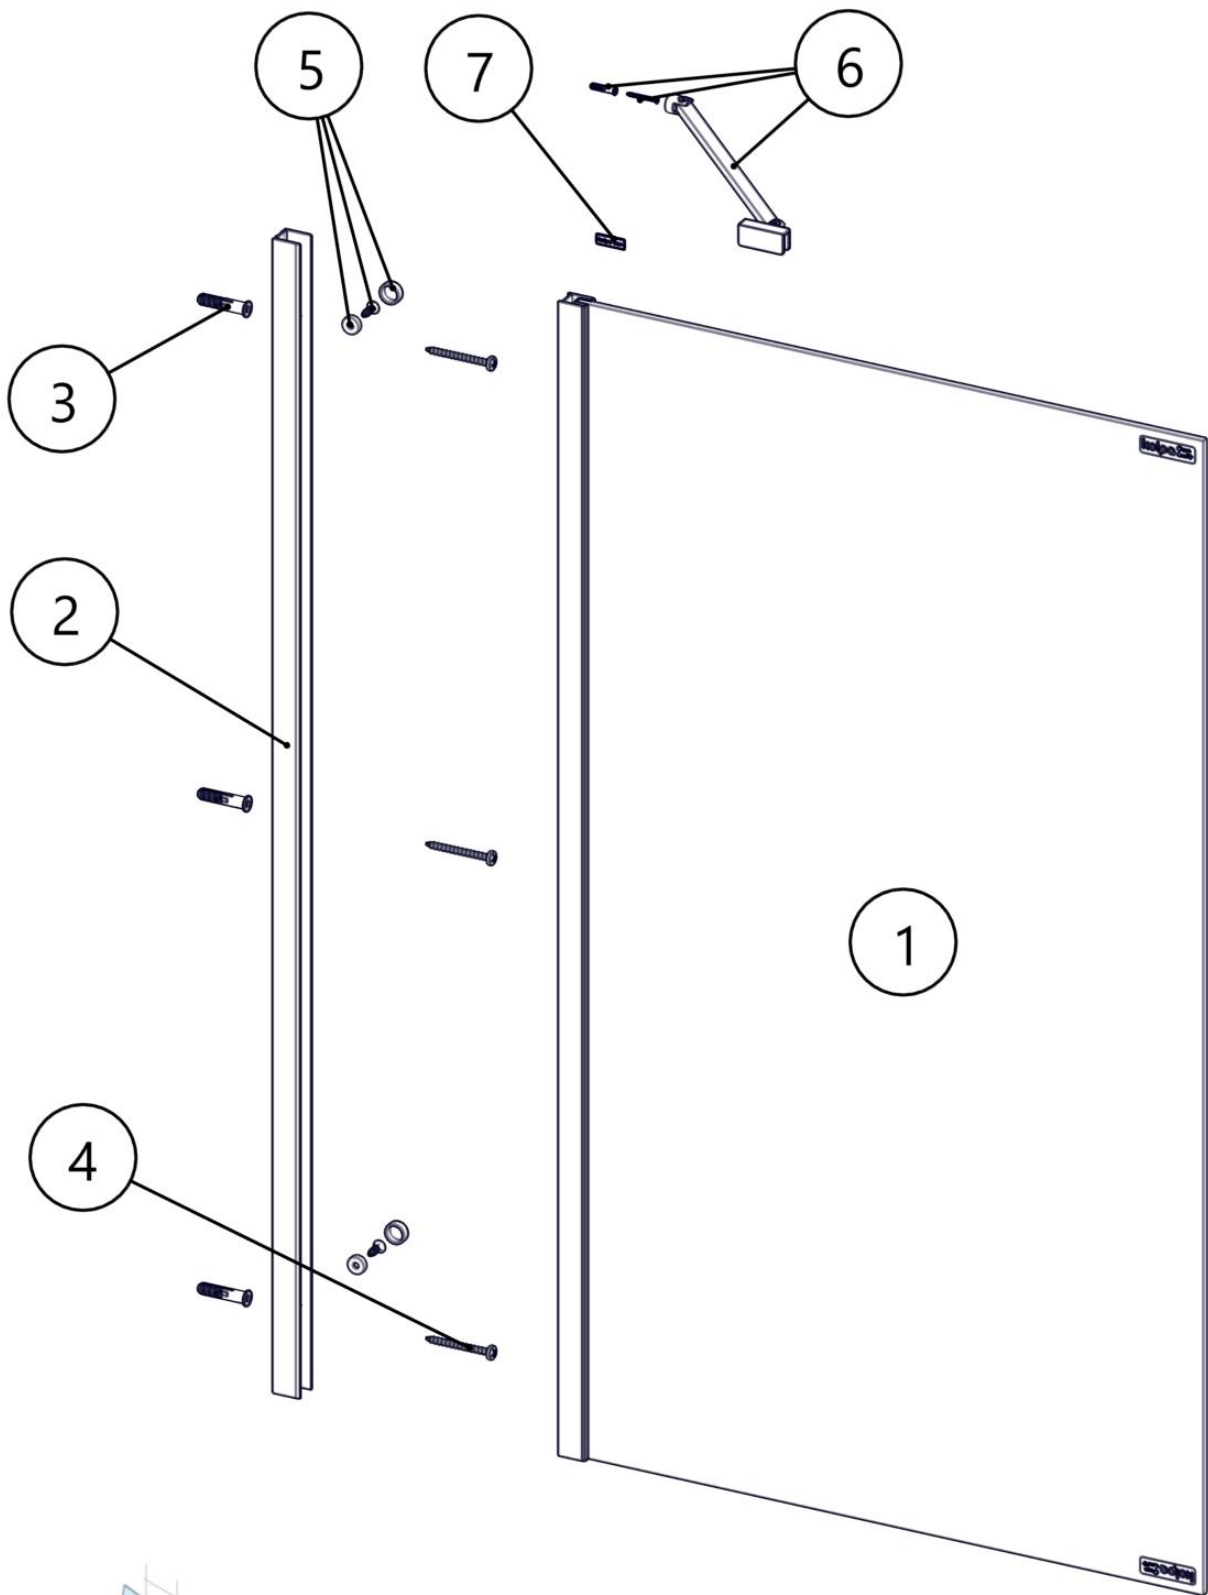






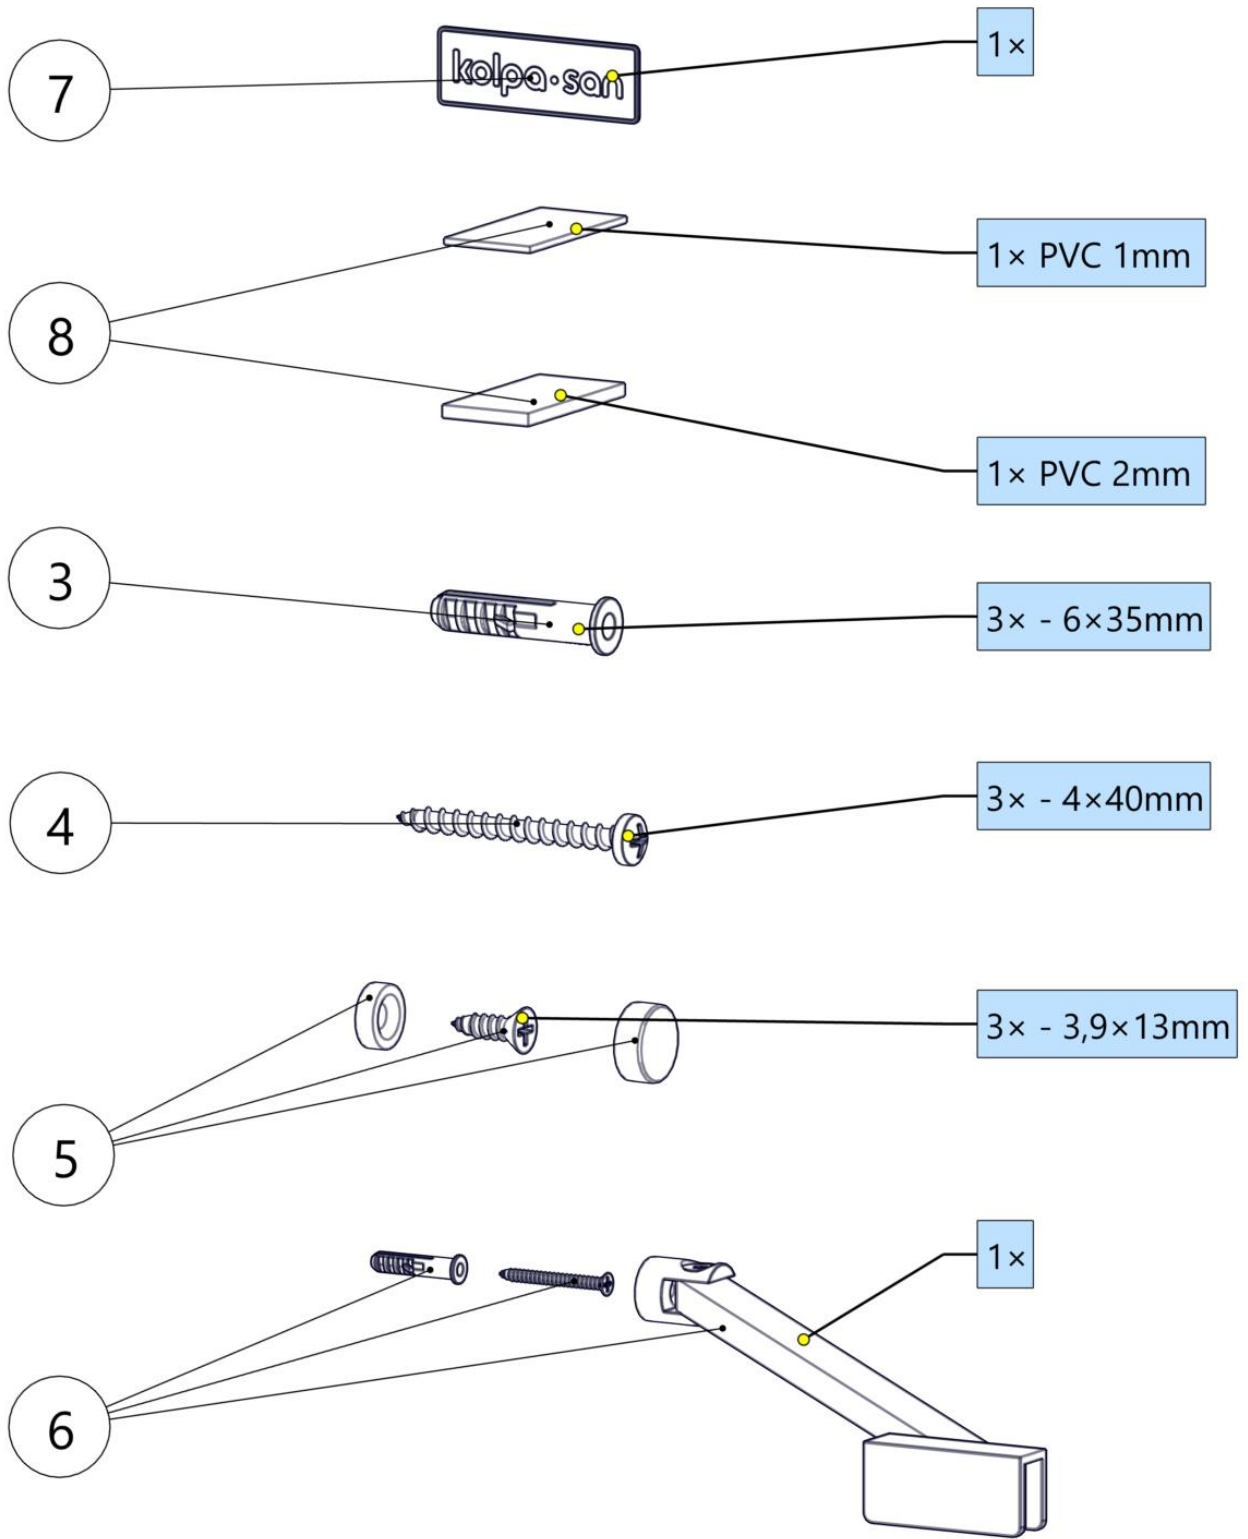


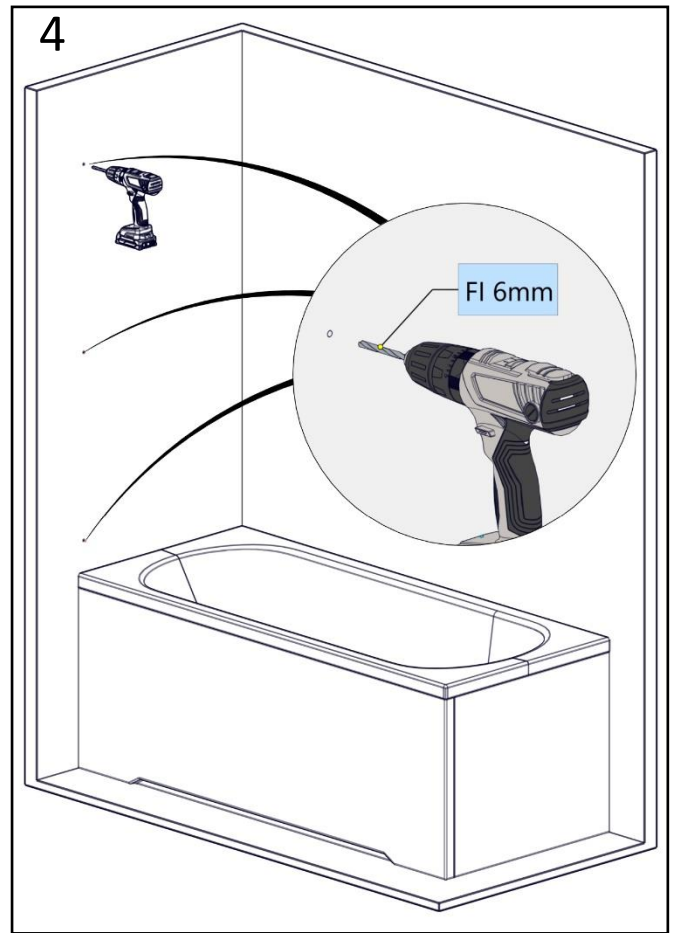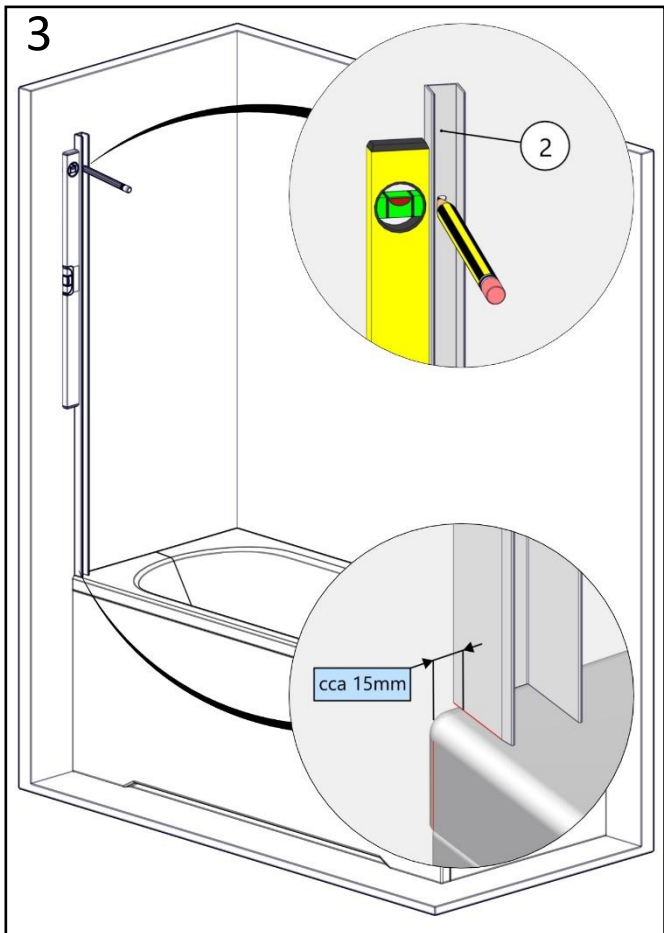
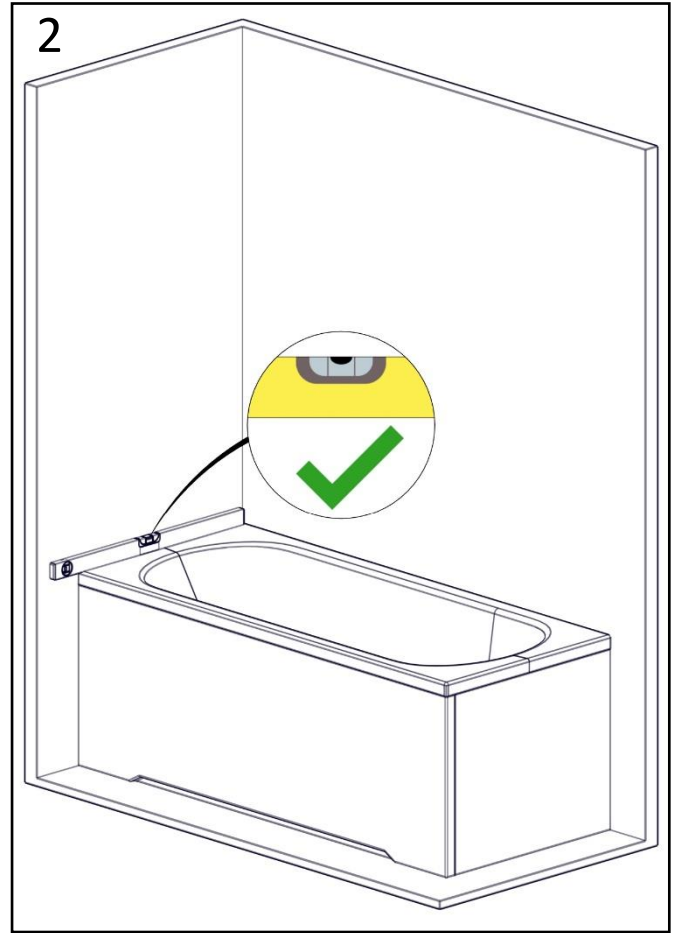
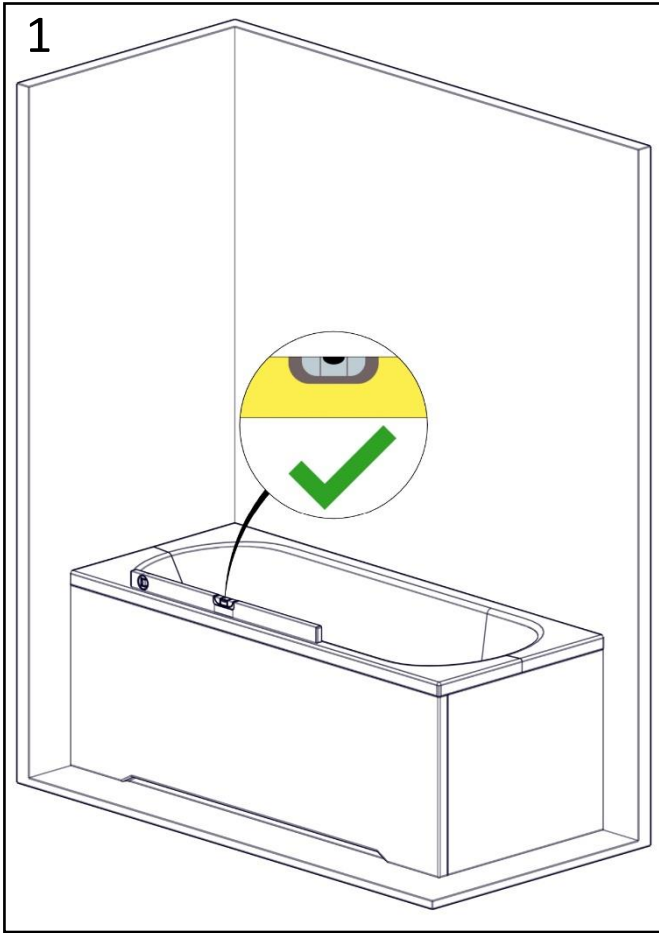


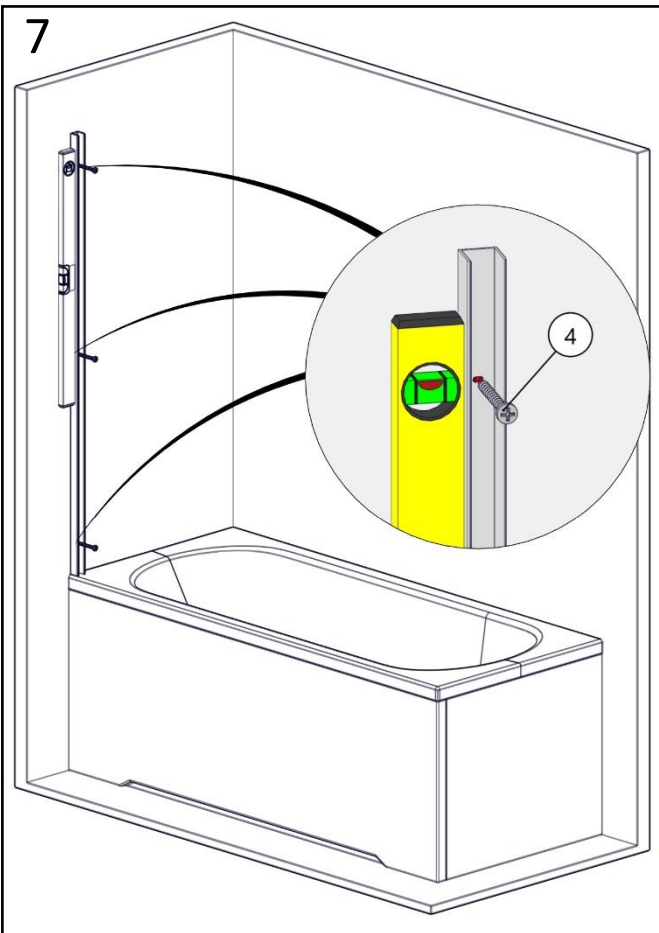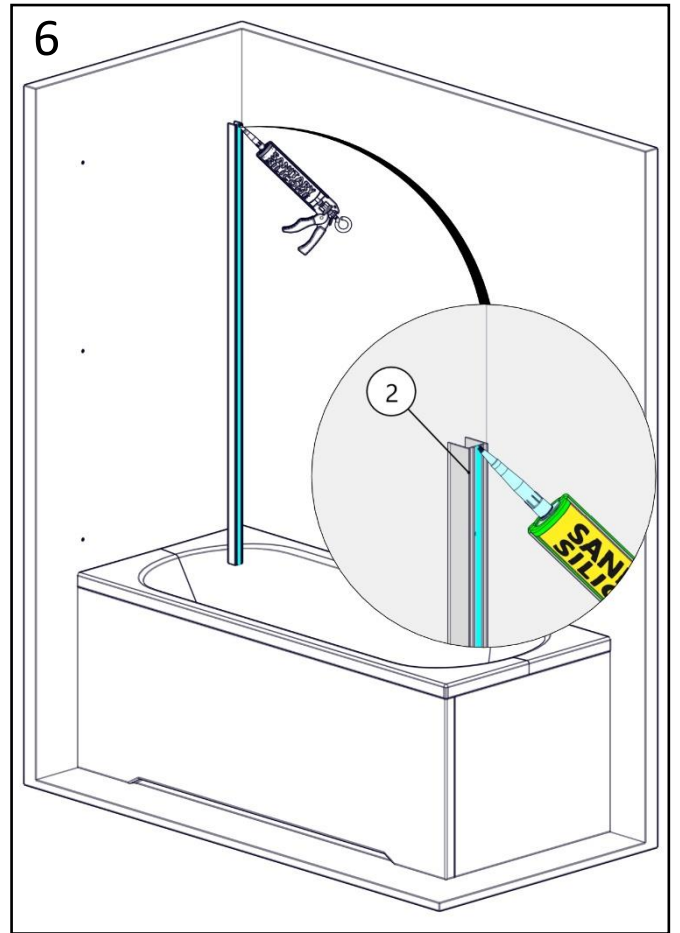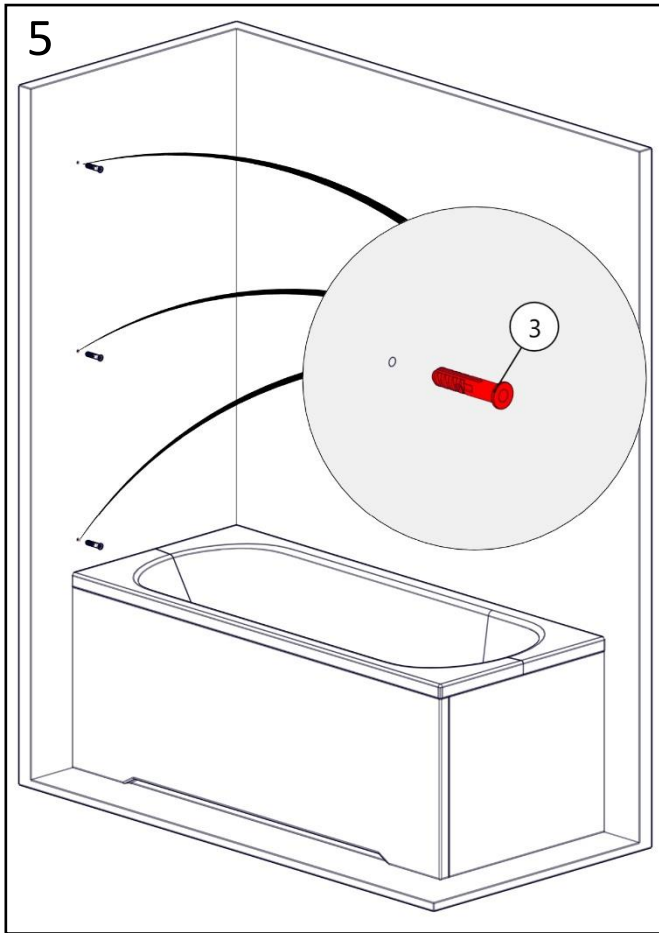


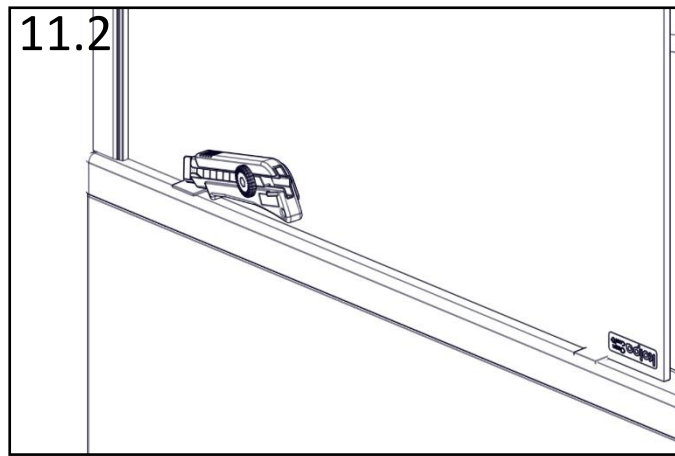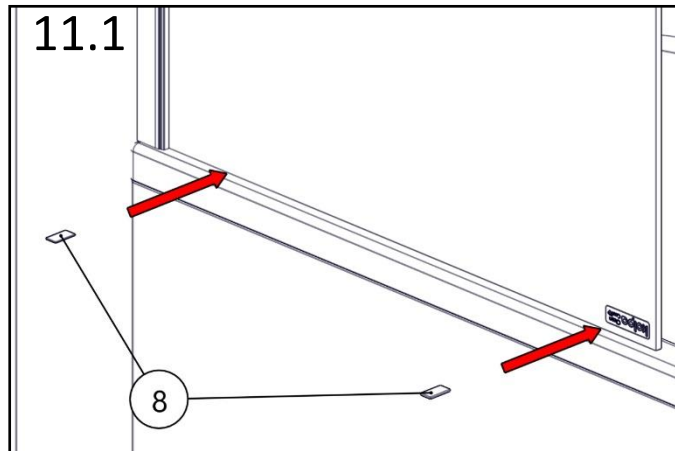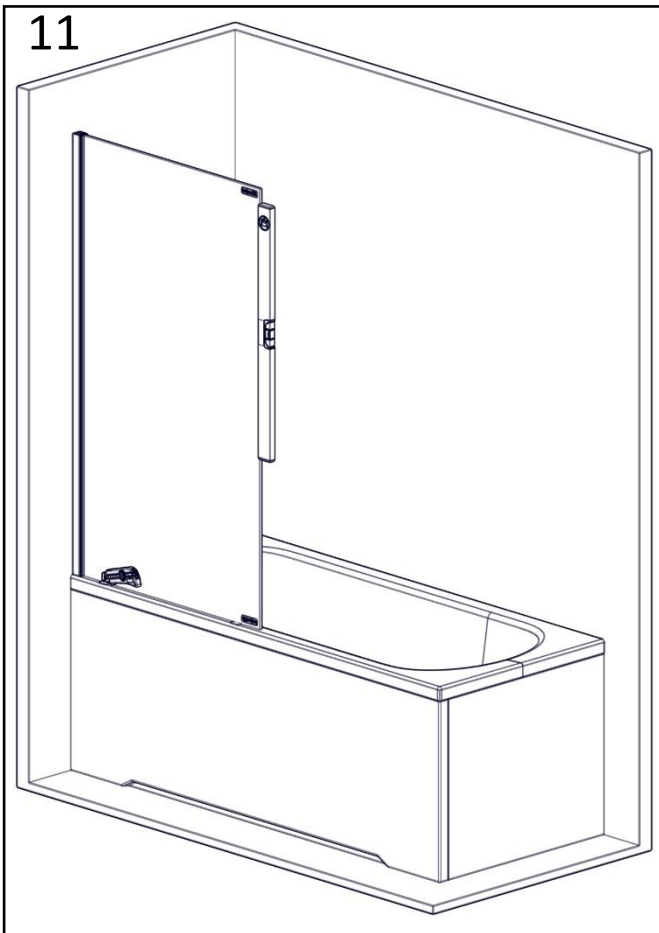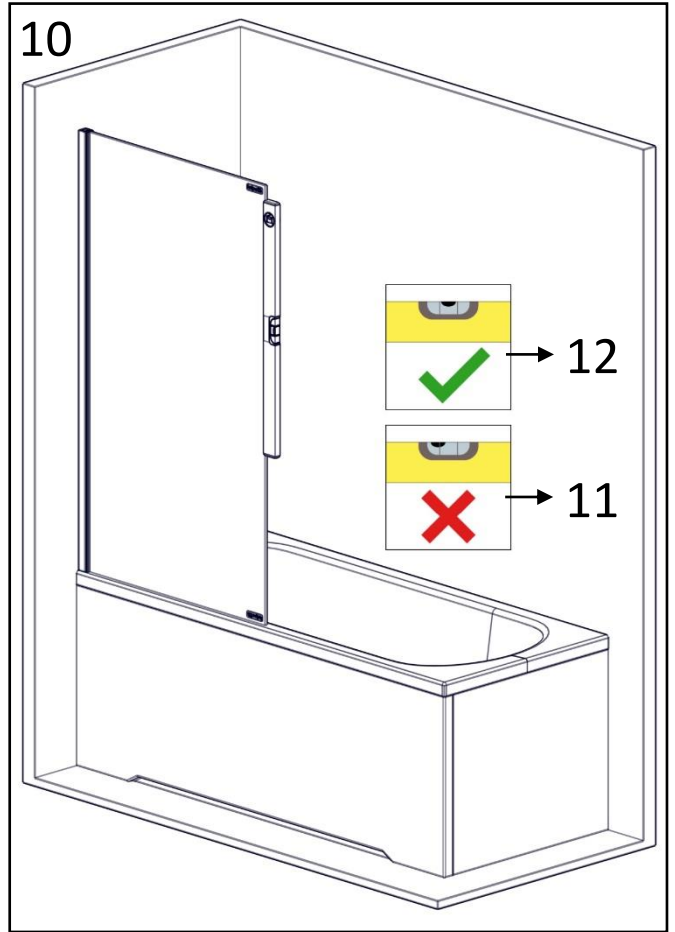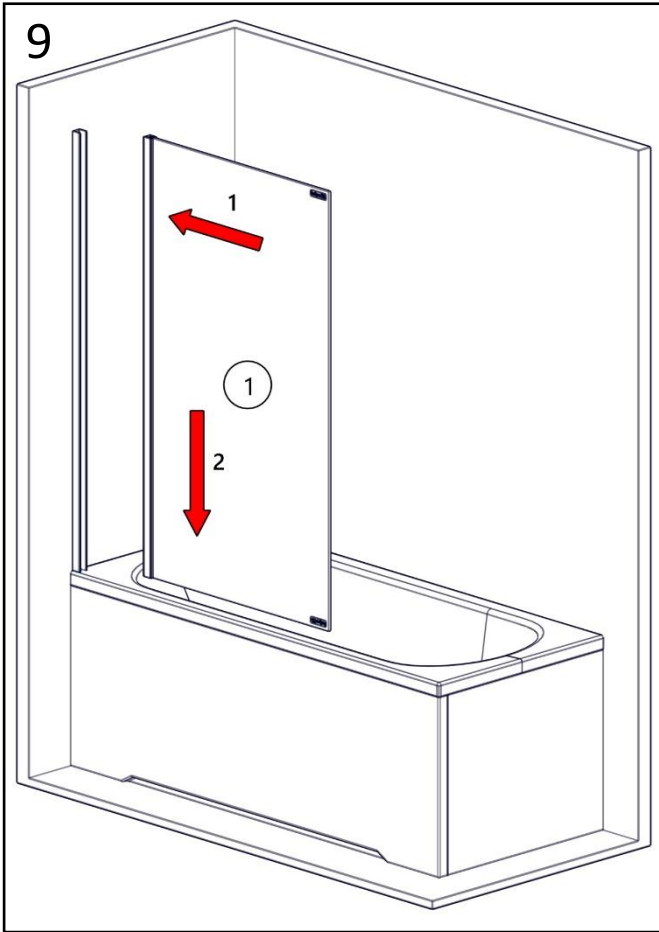

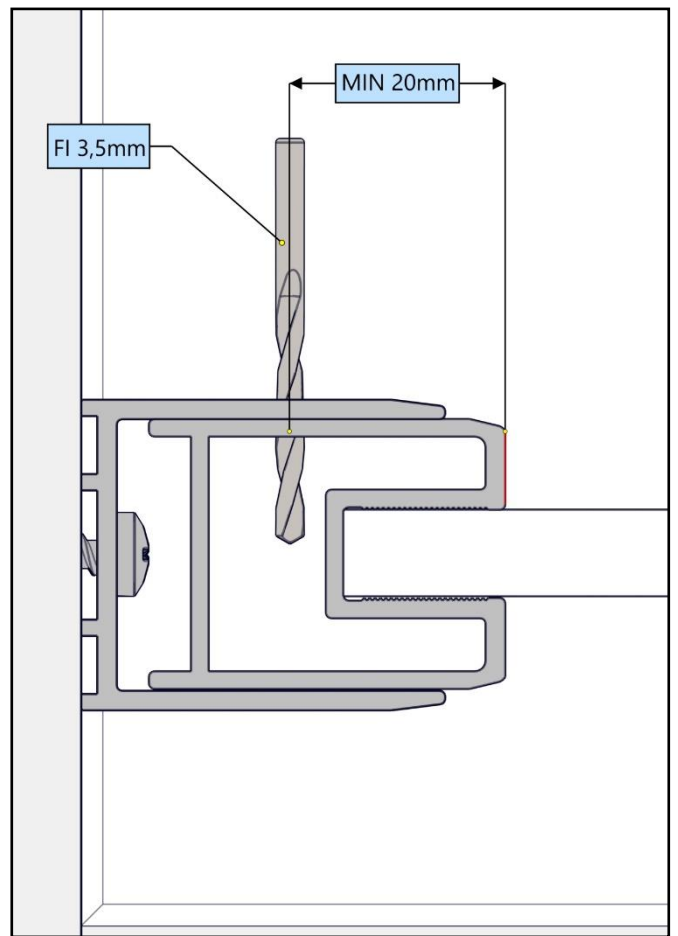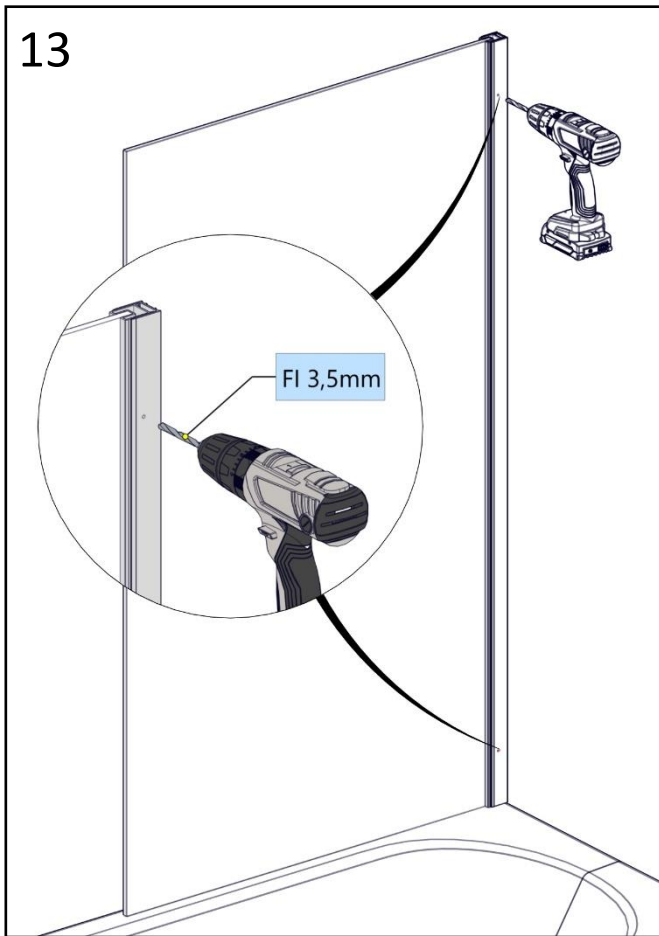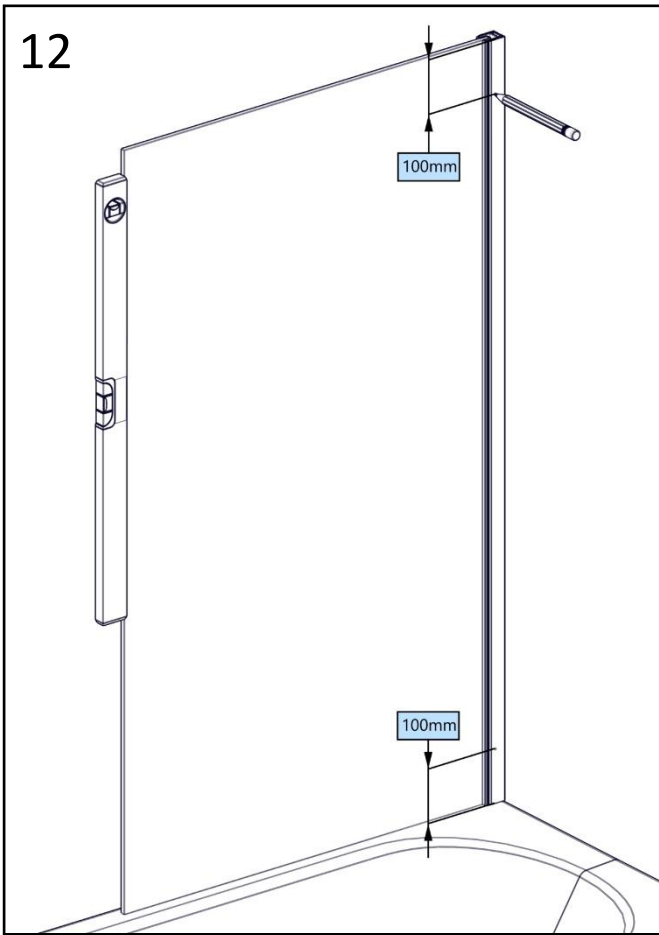


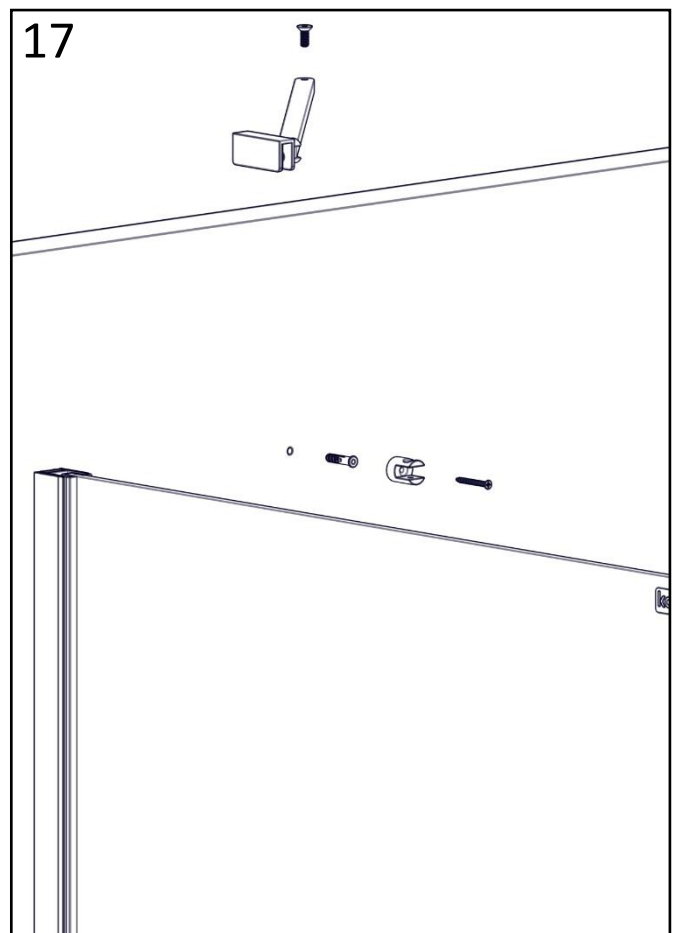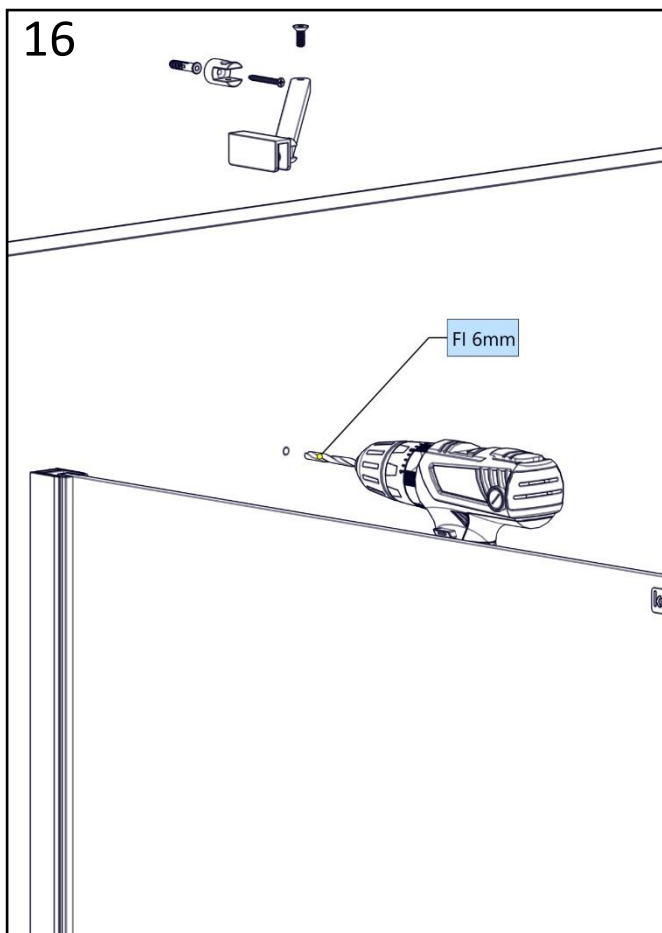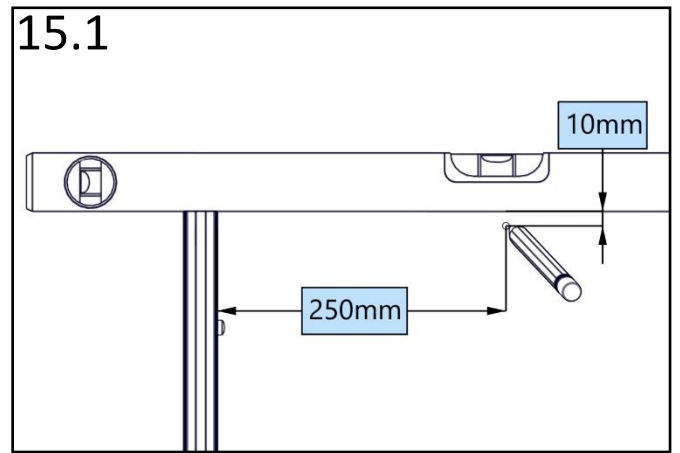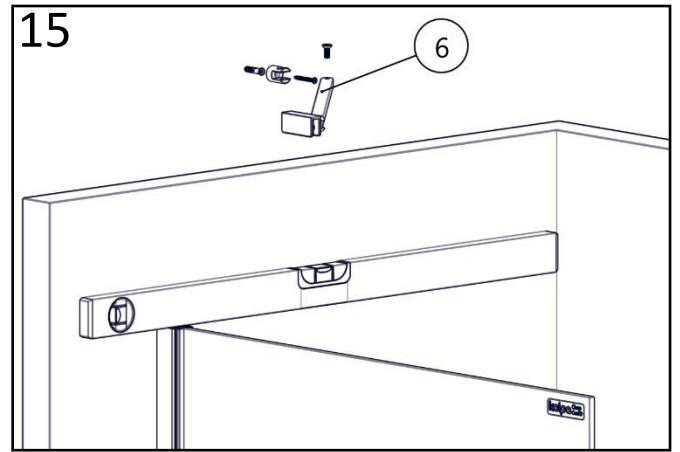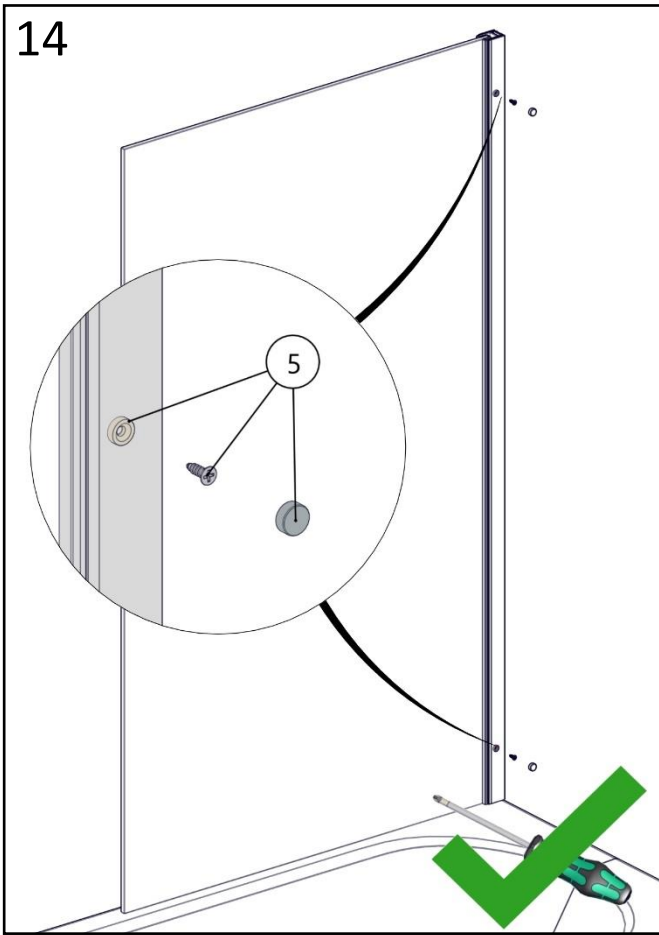

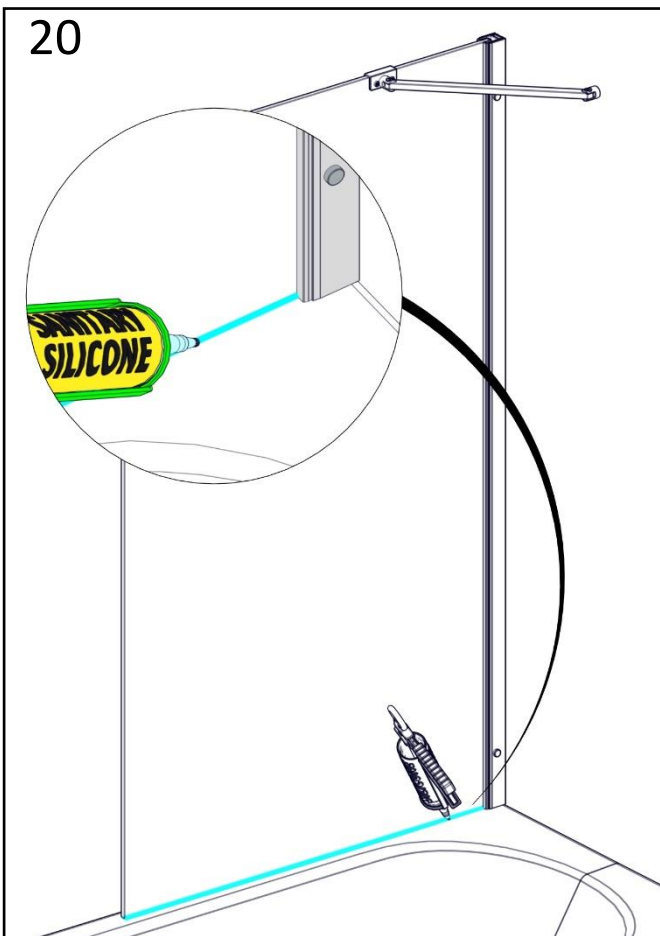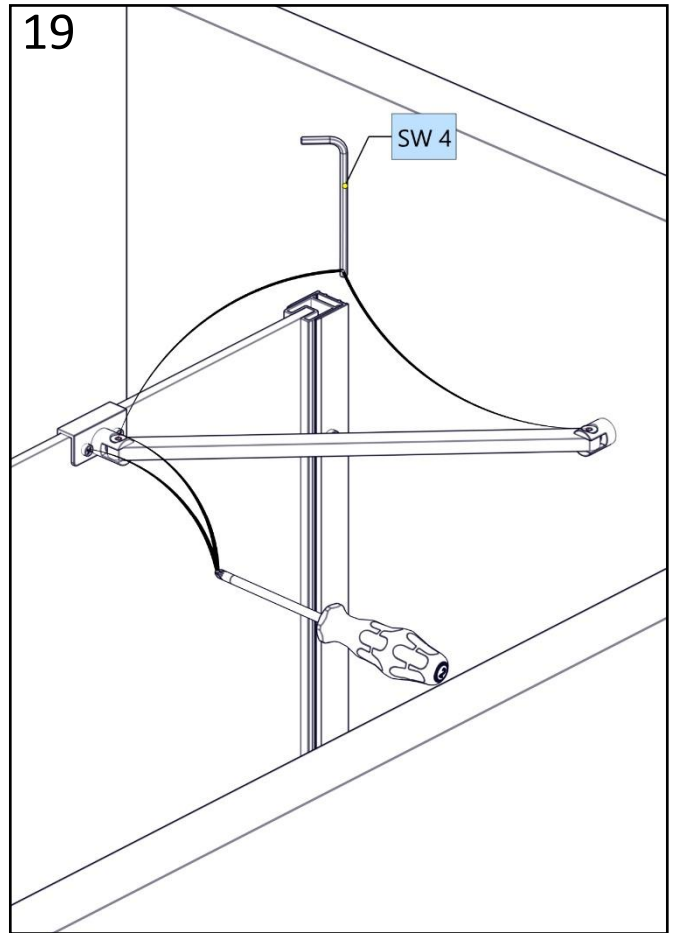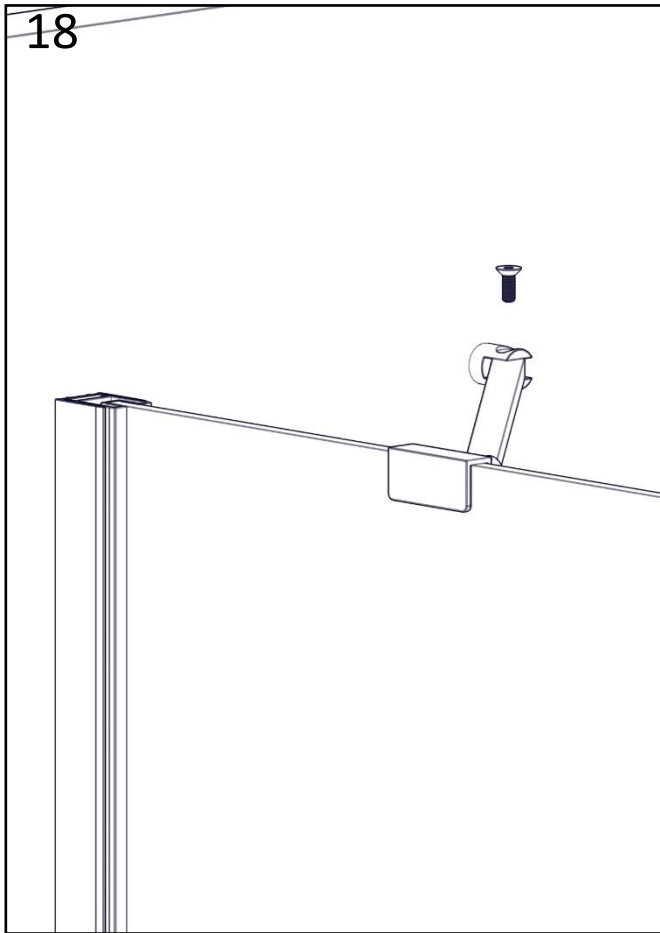


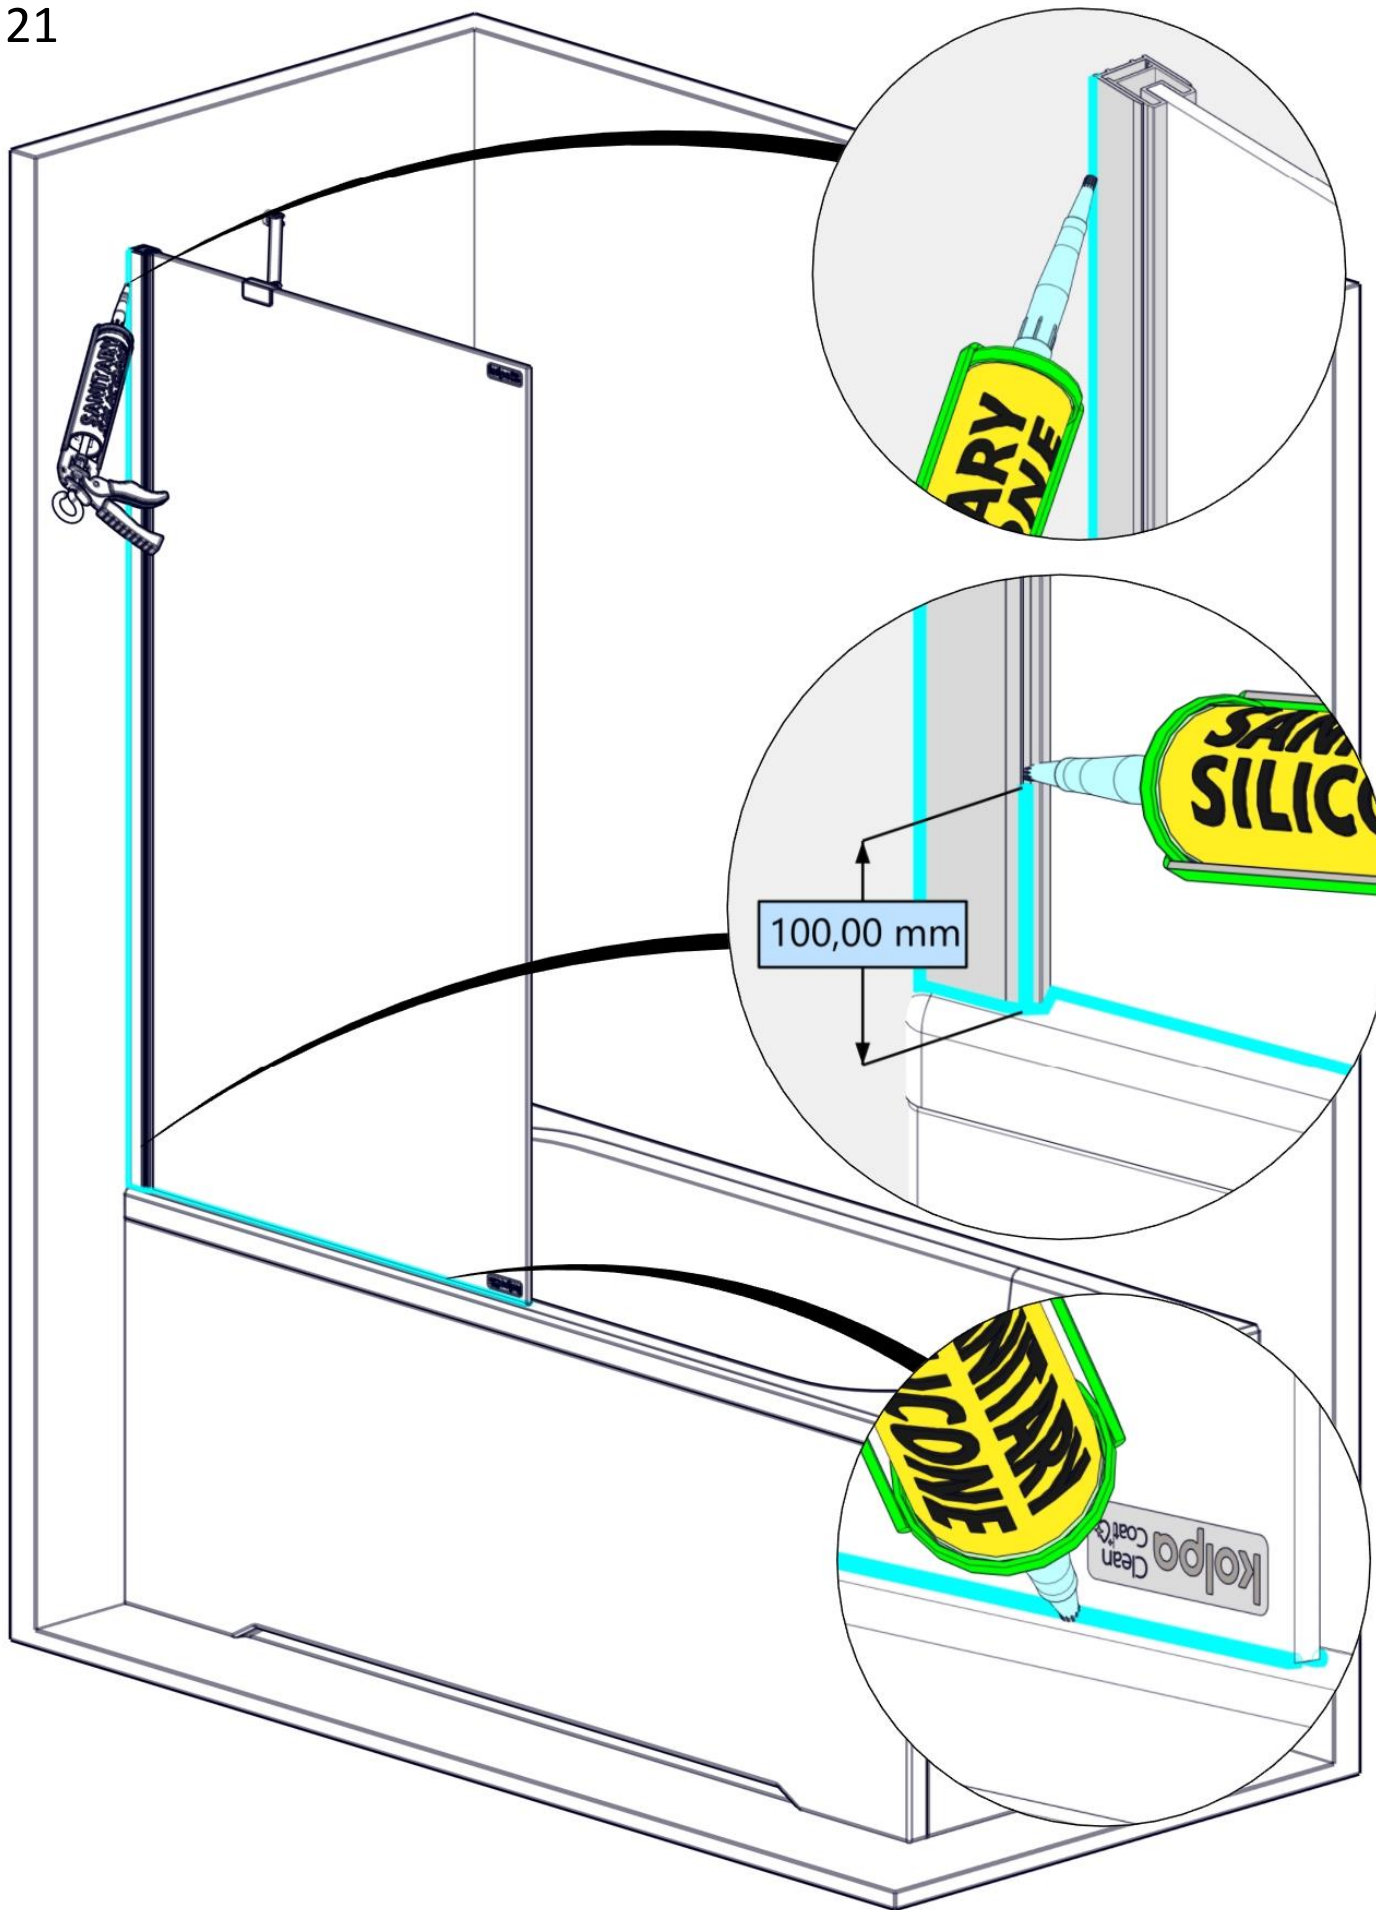


22

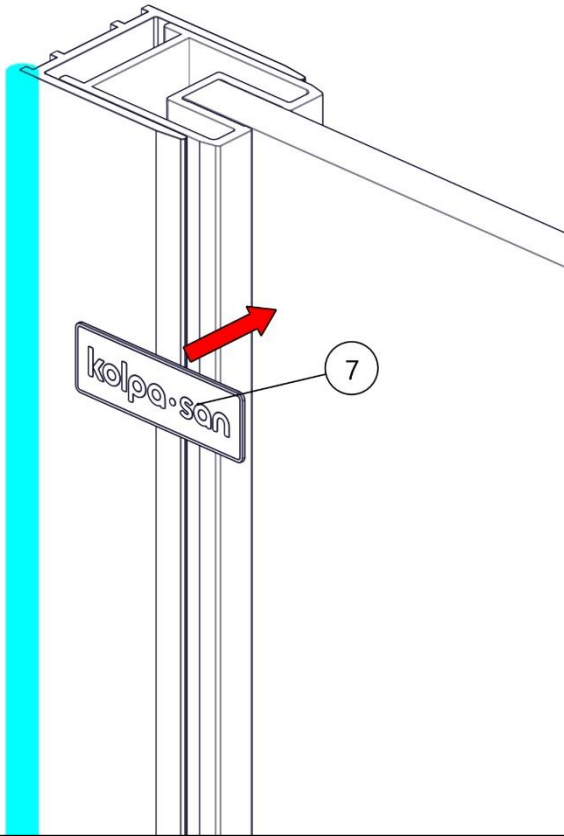

23

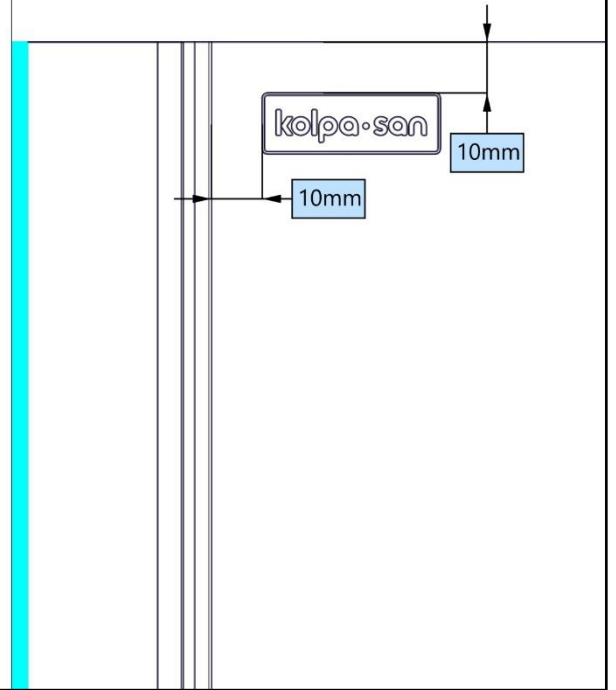

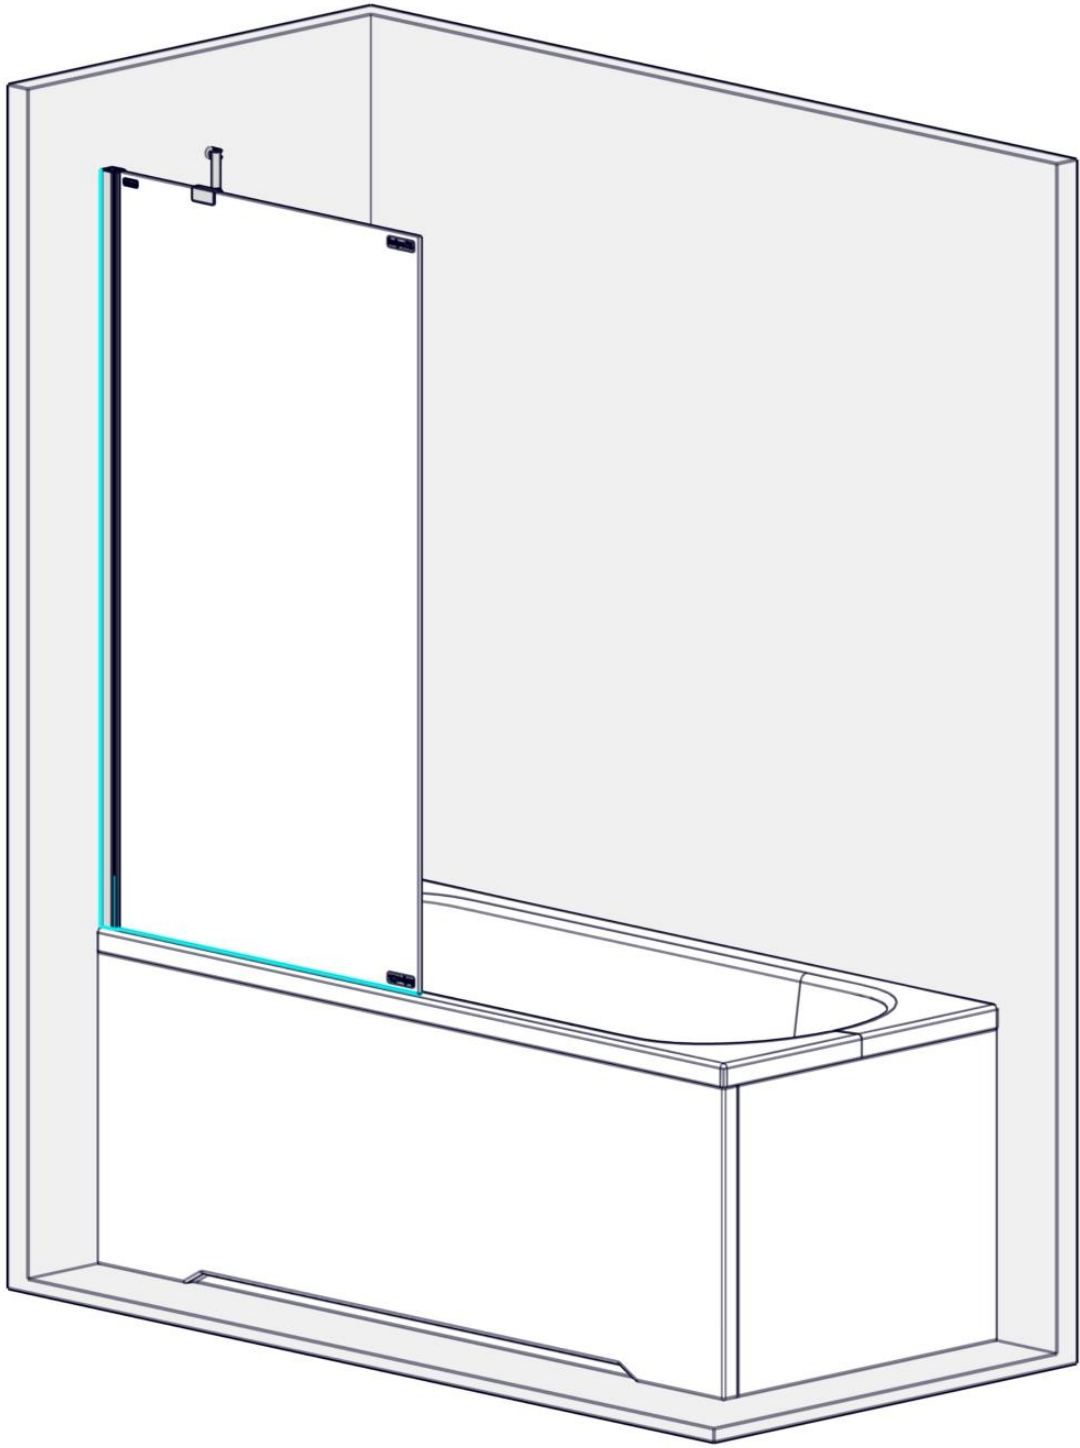

**24h**